

SHARP 20D2-S SERVICE MANUAL



Quick Links

- [Waveforms](#)
- [Block Diagram](#)
- [Schematic Diagram](#)
- [Replacement Parts List](#)
- [Crt Unit](#)
- [Packing of the Set](#)




Table of Contents

- [Table of Contents](#)
- [WAVEFORMS](#)
- [SOLID STATE DEVICE BASE DIAGRAM](#)
- [CHASSIS LAYOUT](#)
- [BLOCK DIAGRAM](#)
- [DESCRIPTION OF SCHEMATIC DIAGRAM](#)
- [SCHEMATIC DIAGRAM](#)
- [CRT UNIT](#)
- [MAIN UNIT](#)
- [PRINTED WIRING BOARD ASSEMBLIES](#)
- [REPLACEMENT PARTS LIST](#)
- [MAIN UNIT](#)
- [CRT UNIT](#)
- [HEADPHONE JACK UNIT](#)
- [SUPPLIED ACCESSORIES](#)
- [PACKING PARTS](#)
- [CABINET PARTS](#)
- [PACKING OF THE SET](#)
- [Other ManualsLib Projects](#)

SHARP

SERVICE MANUAL

S92Q420D2-S//

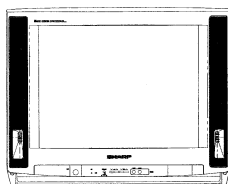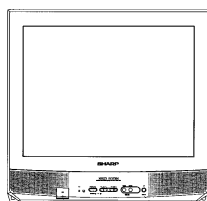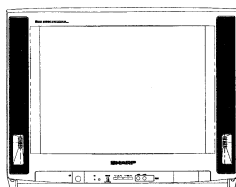**20D2-S/G****21D1-S/G****21D2-S/G**

COLOUR TELEVISION

Chassis No. GA-1**20D2-S/G
21D1-S/G
21D2-S/G**

MODELS

In the interests of user-safety (Required by safety regulations in some countries) the set should be re-stored to its original condition and only parts identical to those specified should be used.

FEATURES

- Multi 18 systems
- Full Auto Channel Preset and Auto Channel Skip
- 100-CH Program Memory
- CATV(Hyper Band) Ready
<Used Frequency Synthesizer Tuner>
- AVL(Sound Keeper) Function
- High Contrast Picture(Black Stretch Circuit)
- On Timer/Sleep Timer/Reminder Timer
- Blue Back Noise Mute
- Front AV-In & Rear AV-In/Out Terminals
(Front Priority)
- Colour Comb Filter(NTSC only)
- Headphone Terminal
- Hotel Mode
- Arabic/Chinese/English/French/Malay/Russian
6 Languages OSD
- White Temperature Adjustment

CONTENTS

	Page		Page
● SPECIFICATIONS	2	■ HEADPHONE JACK UNIT	33
● IMPORTANT SERVICE NOTES	2	■ MAIN UNIT	34
● ADJUSTMENT PRECAUTIONS	3	● PRINTED WIRING BOARD ASSEMBLIES	40
● MEMORY MAP	12	● REPLACEMENT PARTS LIST	
● GA1 HOTEL MODE APPLICATION	16	■ ELECTRICAL PARTS	
● TROUBLE SHOOTING TABLE	16	MAIN UNIT	45
● WAVEFORMS	19	CRT UNIT	48
● SOLID STATE DEVICE BASE DIAGRAM	21	HEAD PHONE JACK UNIT	49
● CHASSIS LAYOUT	22	■ SUPPLIED ACCESSORIES	49
● BLOCK DIAGRAM	25	■ PACKING PARTS	49
● DESCRIPTION OF SCHEMATIC DIAGRAM ..	31	■ CABINET PARTS	50
● SCHEMATIC DIAGRAM		● PACKING OF THE SET	51
■ CRT UNIT	32		

WARNING

The chassis in this receiver is partially hot. Use an isolation transformer between the line cord plug and power receptacle, when servicing this chassis. To prevent electric shock, do not remove cover. No user – serviceable parts inside. Refer servicing to qualified service personnel.

SHARP CORPORATION

SPECIFICATIONS

Convergence	Self Convergence System
Focus	Quadra-Potential Electrostatic
Sweep Deflection	Magnetic
Intermediate Frequencies	
Picture IF Carrier	38.9MHz
Sound IF Carrier Frequency	
6.5MHz	32.4MHz
6.0MHz	32.9MHz
5.5MHz	33.4MHz
Colour Sub-Carrier Frequency	
34.47MHz	34.47MHz
Power Input	110 ~ 240V AC 50/60 Hz
Power Consumption	
20D2-S/G	72W
21D1-S/G	75W
21D2-S/G	79W
Audio Power Output Rating	
20D2-S/G, 21D2-S/G	5.0W(at Max.)
21D1-S/G	3.0W(at Max.)
Speaker Size	
20D2-S/G, 21D2-S/G	5 x 9 cm Elliptic (2 pcs)
21D1-S/G	5 x 9 cm Elliptic (1 pcs)
Voice Coil Impedance	16 ohms at 400 Hz
Aerial Input Impedance	
VHF/UHF	75 ohms Unbalanced
Receiving System	PAL-B/G,D/K,I SECAM-B/G,D/K,K1
Tuner Ranges	
VHF-Channels	E2(48.25MHz) thru E12(224.25MHz) C1(49.75MHz) thru C12(216.25 MHz) S1(105.25MHz) thru S36(423.25MHz)
UHF-Channels	E21(471.25MHz) thru E69(855.25MHz) C13(471.25MHz) thru C57(863.25MHz) S37(431.25MHz) thru S41(463.25MHz)
Dimensions	
20D2-S/G	Width: 594.0mm Height: 485.0mm Depth: 478.0mm Weight(approx): 18.0 kg
21D1-S/G	Width: 499.0mm Height: 478.0mm Depth: 476.5mm Weight(approx): 20.5 kg
21D2-S/G	Width: 594.0mm Height: 465.0mm Depth: 473.0mm Weight(approx): 21.0 kg
Cabinet material	All Plastics

Specifications are subject to change without prior notice

IMPORTANT SERVICE NOTES

Maintenance and repairing of this receiver should be done by qualified service personnel only.

SERVICE OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove static charge from it by Connecting a 10K ohm Resistor in series with an insulated wire(such as a test probe) between picture tube dag and 2nd anode lead. (AC line cord should be disconnected from AC outlet.)

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage completely.

X-RAY

This receiver is designed so that any X-Ray radiation is kept to an absolute Minimum. Since certain malfunctions or servicing may produce potentially hazardous radiation with prolonged exposure at close range, the following precautions should be observed:

1. 20D2-S/G : When repairing the circuit, be sure not to increase the high voltage to more than 27.6kV(at beam 0 μA) for the set.
21D1-S/G, 21D2-S/G : When repairing the circuit, be sure not to increase the high voltage to more than 28.0kV(at beam 0 μA) for the set.
2. 20D2-S/G : To keep the set in a normal operation , be sure to make it function on 24.5kV±1.5kV(at beam 1100μA) in the case of the set.
21D1-S/G, 21D2-S/G : To keep the set in a normal operation , be sure to make it function on 24.8kV±1.5kV(at beam 1100μA) in the case of the set.
The set has been factory - Adjusted to the above mentioned high voltage.

- *If there is a possibility that the high voltage fluctuates as a result of the repairing, never forget to check for such high voltage after the work.
3. Do not substitute a picture tube with unauthorized types and/or brands which may cause excess X-ray radiation.

BEFORE RETURNING THE RECEIVER

Before returning the receiver to the user, perform the following safety Checks.

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
2. Inspect all protective devices such as non-metallic control knobs, insulating fishpapers, cabinet backs, adjustment and compartment covers or shields, insulation resistor-capacity networks, mechanical insulators etc.

ADJUSTMENT PRECAUTIONS

This model's setting are adjusted in two different ways: through the I²C bus control and in the conventional analog manner. The adjustments via the I²C bus control include preset-only items and variable data.

CAUTION: Make sure TV set is in "Normal condition" before switch to Service Mode for adjustment.

1. Setting the service mode by the microprocessor.

- ① Short JA 137 & JA 138 for 1 second and release to switch to the service mode position, and the microprocessor is in input mode. (Adjustment through the I2C bus control). (Use JWS Key to set as well).
- ② Press the CH DOWN / UP key on the remote controller to get ready to select the mode one by one.
- ③ Press the CH DOWN / UP key on the remote controller to select the modes reversibly one by one.
- ④ Using the VOLUME UP/DOWN key on the remote controller, the data can be modified.
- ⑤ Short JA 137 & JA 138 for 1 second and release to switch to the normal mode (OFF) position, and the microprocessor is in out of the service mode.

2. Factory Presetting.

- ① Short JA 137 & JA 138, then turn on the main power and release to switch to the Service Mode position. Initial values are automatically preset, only when a new EEPROM is used (Judge with the first 4 bytes).
- ② The initial data are preset as listed in page 8, 9, & 10.
- ③ Make sure the data need modify or not (Initial data).


Note: Once the chassis has been assembly together and ready to be POWER ON for the FIRST TIME, make sure to short JA137 & JA138 to switch to the service mode position first and then turn on the main power switch (See 2-(1) above).

Precaution: If haven't done this initiation, it may possibly generate excessive Beam current.


3. For reference please check with memory map (GA-1 Series type RH-IX3368CEN6)

■ SERVICE MODE

(1) In the Service Mode, Key is used to select the mode in the following order

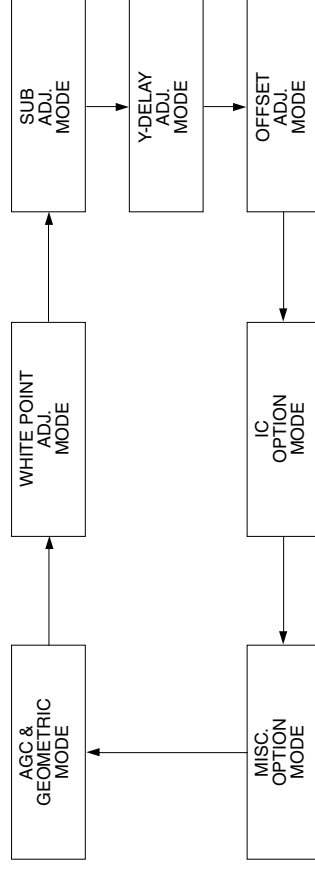



FORWARD : CH DOWN KEY
REVERSE : CH UP KEY

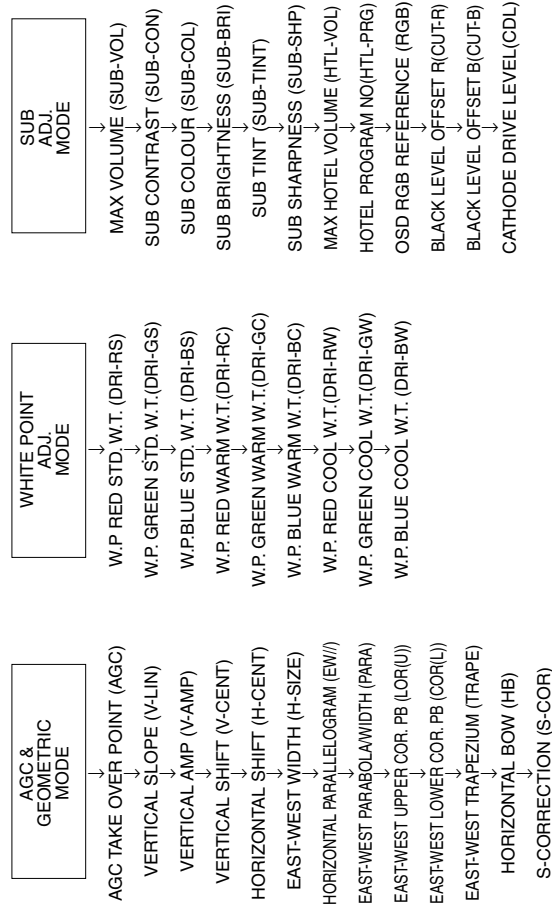

FORWARD : CH DOWN KEY
REVERSE : CH UP KEY
* () means OSD display.

RC COMMAND	SERVICE-ITEM
FUNCTION	AGC
CONTRAST DOWN	V-LIN
COLOUR DOWN	V-AMP
BRIGHTNESS DOWN	V-CENT
TINT DOWN	H-CENT
SHARPNESS DOWN	EW / /
SYSTEM	HB
BLUEBACK	S-COR
TIMER	SUB-VOL
CONTRAST UP	SUB-CON
COLOUR UP	SUB-COL
BRIGHTNESS UP	SUB-BRI
TINT UP	SUB-TINT
SHARPNESS UP	SUB-SHP

* Direct Key-in for Service Item in Service Mode.

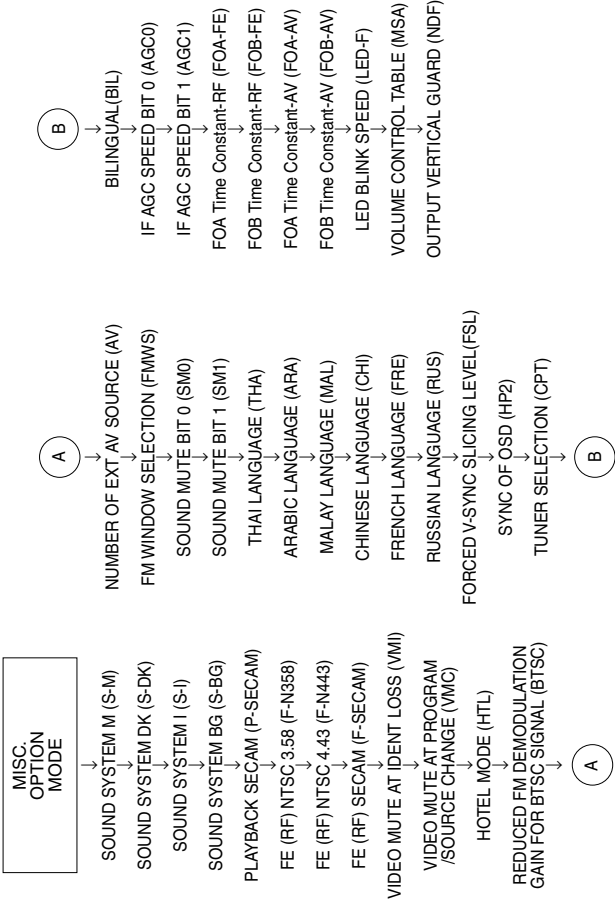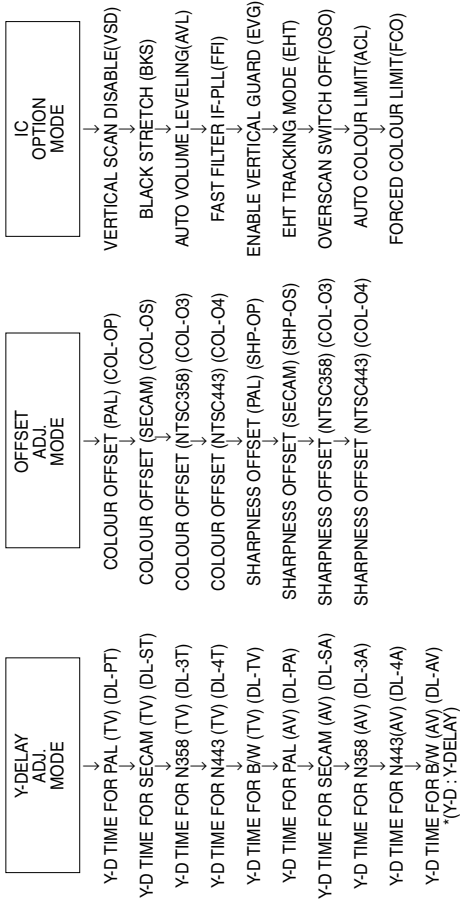

AFTER SHORT JA 137 & JA 138 ,AND TURN ON THE MAIN POWER SWITCH,READ DATA FROM EEPROM ADDRESS 00H ~ 03H,AND COMPARE TO THE LIST BELOW, IF DIFFERENT, INITIALIZE THE EEPROM.

Address : Data
00H : 55H
01H : 4FH
Address : Data
02H : 43H
03H : A1H

EEPROM ITEMS	OSD	DATA LENGTH	INITIAL DATA	FIX/ADJ	REMARK
AGC TAKE OVER POINT	AGC	0-63	14	ADJ	
VERTICAL SLOPE	V-LIN	0-63	32	ADJ	
VERTICAL AMPLITUDE	V-AMP	0-63	32	ADJ	
HORIZONTAL SHIFT	V-CENT	0-63	32	ADJ	
HORIZONTAL SHIFT	H-CENT	0-63	32	ADJ	
EAST-WEST WIDTH	H-SIZE	0-63	32	*FIX	
HORIZONTAL PARALLELOGRAM	EW//	0-63	32	*FIX	
EAST-WEST PARABOLA WIDTH	PARA	0-63	32	*FIX	
EAST-WEST UPPER CORNER PARABOLA	COR (U)	0-63	32	*FIX	
EAST-WEST LOWER CORNER PARABOLA	COR (L)	0-63	32	*FIX	
EAST-WEST TRAPEZIUM	TRAPE	0-63	32	*FIX	
HORIZONTAL BOW	HB	0-63	32	*FIX	
S-CORRECTION	S-COR	0-63	0	ADJ	*4
WHITE POINT RED STD WHITE TEMP	DRI-RS	0-63	32	*FIX	
WHITE POINT GREEN STD WHITE TEMP	DRI-GS	0-63	32	ADJ	
WHITE POINT BLUE STD WHITE TEMP	DRI-BB	0-63	32	ADJ	
WHITE POINT RED COOL WHITE TEMP	DRI-RC	0-63	25	ADJ	*3
WHITE POINT GREEN COOL WHITE TEMP	DRI-GC	0-63	32	ADJ	*3
WHITE POINT BLUE COOL WHITE TEMP	DRI-BC	0-63	32	ADJ	SAME AS (DRI-BB) DATA
WHITE POINT RED WARM WHITE TEMP	DRI-RW	0-63	32	*FIX	
WHITE POINT GREEN WARM WHITE TEMP	DRI-GW	0-63	32	ADJ	(DRI-GS)-7 DATA
WHITE POINT BLUE WARM WHITE TEMP	DRI-BW	0-63	32	ADJ	(DRI-BB)-7 DATA
MAX VOLUME	SUB-VOL	0-63	63	*FIX	
MAX CONTRAST	SUB-CON	0-63	63	ADJ	
SUB COLOUR	SUB-COL	0-63	32	ADJ	
SUB BRIGHTNESS	SUB-BRI	0-63	32	ADJ	
SUB TINT	SUB-TINT	0-63	32	ADJ	
SUB SHARPNESS	SUB-SHP	0-63	32 (20)	*FIX	
MAX HOTEL VOLUME	HTL-VOL	0-63	32	*FIX	
HOTEL PROGRAM NUMBER	HTL-PRG	0-99 OR 99 FOR NONE	255	*FIX	
OSD GRB REFERENCE	RGB	0-15	15	ADJ	
BLACK LEVEL OFF-SET R	CUT-R	0-63	32	ADJ	
BLACK LEVEL OFF-SET G	CUT-G	0-63	32	ADJ	
CATHODE DRIVE LEVEL	COL	0-15	0	ADJ	*2
Y-DELAY TIME FOR PAL(TV) [YD]	DL-PT	0-15	12	*FIX	
Y-DELAY TIME FOR SECAM(TV) [YD]	DL-ST	0-15	15	*FIX	
Y-DELAY TIME FOR N358 (TV) [YD]	DL-3T	0-15	12	*FIX	
Y-DELAY TIME FOR N443 (TV) [YD]	DL-4T	0-15	12	*FIX	
Y-DELAY TIME FOR BW (TV) [YD]	DL-TV	0-15	12	*FIX	
Y-DELAY TIME FOR PAL (AV) [YD]	DL-PA	0-15	12	*FIX	
Y-DELAY TIME FOR SECAM (AV) [YD]	DL-SA	0-15	15	*FIX	
Y-DELAY TIME FOR N358 (AV) [YD]	DL-3A	0-15	12	*FIX	
Y-DELAY TIME FOR N443 (AV) [YD]	DL-4A	0-15	12	*FIX	
Y-DELAY TIME FOR BW (AV) [YD]	DL-AV	0-15	12	*FIX	
COLOUR OFFSET (PAL)	COL-OP	0-15	8	ADJ	*5
COLOUR OFFSET (SECAM)	COL-OS	0-15	8	ADJ	*5
COLOUR OFFSET (NTSC358)	COL-O3	0-15	4	ADJ	*5
COLOUR OFFSET (NTSC443)	COL-O4	0-15	4	ADJ	*5
SHARPNESS OFFSET (PAL)	SHP-OP	0-15	8	*FIX	
SHARPNESS OFFSET (SECAM)	SHP-OS	0-15	4	*FIX	
SHARPNESS OFFSET (NTSC358)	SHP-O3	0-15	12	FIX	

EEPROM ITEMS	OSD	DATA LENGTH	INITIAL DATA	FIX/ADJ	REMARK
SHARPNESS OFFSET (NTSC443)	SHP-O4	0-15	8	*FIX	
VERTICAL SCAN DISABLE	BKS	0(DISABLE)(ENABLE)	0	*FIX	
BLACK STRETCH	AVL	0(DISABLE)(ENABLE)	1	*FIX	
AUTOMATIC VOLUME LEVELING	FFI	0(DISABLE)(ENABLE)	0	*FIX	
FAST FILTER IF-PLL	EVG	0(DISABLE)(ENABLE)	1	*FIX	
ENABLE VERTICAL GUARD (RGB BLANKING)	EHT	0(DISABLE)(ENABLE)	1	*FIX	
EHT TRACKING MODE (HCO)	OSO	0(DISABLE)(ENABLE)	0	*FIX	
OVERSCAN SWITCH OFF	ACL	0(DISABLE)(ENABLE)	0	*FIX	
AUTO COLOUR LIMIT	FCO	0(DISABLE)(ENABLE)	0	*FIX	
FORCED COLOUR LIMIT	S-M	0(DISABLE)(ENABLE)	0	*FIX	
SOUND SYSTEM M	S-DK	0(DISABLE)(ENABLE)	1	ADJ	
SOUND SYSTEM I	S-I	0(DISABLE)(ENABLE)	1	ADJ	
SOUND SYSTEM BG	S-BG	0(DISABLE)(ENABLE)	1	*FIX	
PLAYBACK SECAM	P-SECAM	0(DISABLE)(ENABLE)	1	ADJ	
FE (RF) NTSC 3.58	F-N358	0(DISABLE)(ENABLE)	0	*FIX	
FE (RF) NTSC 4.43	F-N443	0(DISABLE)(ENABLE)	1	ADJ	
FE (RF) SECAM	F-SECAM	0(DISABLE)(ENABLE)	1	ADJ	
VIDEO MUTE AT IDENT LOSS	VMI	0(DISABLE)(ENABLE)	1	*FIX	
VIDEO MUTE AT PROGRAM/SOURCE CHANGE	VMC	0(DISABLE)(ENABLE)	1	*FIX	
HOTEL MODE	HTL	0(DISABLE)(ENABLE)	0	*FIX	
REDUCED FM DEMODULATOR GAIN FOR BTSC SIGNAL	BTSC	0(DISABLE)(ENABLE)	0	*FIX	
NUMBER OF EXTERNAL AV SOURCE	AV	0 FOR 1 AV1 FOR 2AV	1 (0)	*FIX	
FM WINDOW SELECTION	FMWS	0(DISABLE)(ENABLE)	0	*FIX	
SOUND MUTE BIT 0	SM0	0(DISABLE)(ENABLE)	1	*FIX	
SOUND MUTE BIT 1	SM1	0(DISABLE)(ENABLE)	0	*FIX	
THAI LANGUAGE	THA	0(DISABLE)(ENABLE)	0	*FIX	
ARABIC LANGUAGE	ARA	0(DISABLE)(ENABLE)	1	*FIX	
MALAY LANGUAGE	MAL	0(DISABLE)(ENABLE)	1	*FIX	
CHINESE LANGUAGE	CHI	0(DISABLE)(ENABLE)	1	*FIX	
FRENCH LANGUAGE	FRE	0(DISABLE)(ENABLE)	1	*FIX	
RUSSIAN LANGUAGE	RUS	0(DISABLE)(ENABLE)	1	*FIX	
FORCED V-SYNC SLICING LEVEL	FSL	0(DISABLE)(ENABLE)	0	*FIX	
SYNC OF OSD	HP2	0(DISABLE)(ENABLE)	0	*FIX	
TUNER SELECTION (0:SHARP/ALPS;1:MURATA)	GPT	0(DISABLE)(ENABLE)	0	*FIX	
BILINGUAL	BIL	0(DISABLE)(ENABLE)	0	*FIX	
IF AGC SPEED BIT 0	AGC0	0(DISABLE)(ENABLE)	1	*FIX	
IF AGC SPEED BIT 1	AGC1	0(DISABLE)(ENABLE)	0	*FIX	
PHI-1 TIME CONSTANT (RF)	FOA-FE	0(DISABLE)(ENABLE)	0	*FIX	
PHI-1 TIME CONSTANT (RF)	FOB-FE	0(DISABLE)(ENABLE)	0	*FIX	
PHI-1 TIME CONSTANT (OFF AIR)	FOA-AV	0(DISABLE)(ENABLE)	1	*FIX	
PHI-1 TIME CONSTANT (OFF AIR)	FOB-AV	0(DISABLE)(ENABLE)	1	*FIX	
LED BLINK SPEED	LED_F	0(DISABLE)(ENABLE)	0 (1)	*FIX	
VOLUME CONTROL PWM TABLE	MSA	0(DISABLE)(ENABLE)	0 (1)	*FIX	
OUTPUT VERTICAL GUARD	NDF	0(DISABLE)(ENABLE)	0 (1)	*FIX	

NOTE :

- *FIX: PLEASE DO NOT CHANGE FIXED DATA WITHOUT SPECIFIC INSTRUCTION.
Please set the EEPROM initial data according to the value in parenthesis () before adjustment.
- *2: COL ADJUST = (9 for 21" SMEF model) and (7 for other)
- *3: Adjust DRI-RC and DRI-GC as follows :

SMEF	OTHER
DRI-RC	27
DRI-GC	25

- *4: S-COR ADJUST = 20 FOR 21" and 17 FOR 20"
- *5: ADJUST COLOUR OFFSET AFTER ADJUST SUB-COLOUR.
COLOUR OFFSET (PAL) COL-OP : 8 ----> 14
COLOUR OFFSET (SECAM) COL-OS : 8 ----> 14
COLOUR OFFSET (NTSC358) COL-O3 : 4 ----> 10
COLOUR OFFSET (NTSC443) COL-O4 : 4 ----> 10

INITIAL SETTING

(1). In service mode, After execute select POS 1, store the following tuning data in E²PROM.

MCL1			SOUND SYS
CH-NO	Fv (MHz)		
0	41.10		B/G
1	48.25		B/G
2	62.25		B/G
3	77.25		D/K
4	175.25		B/G
5	182.25		B/G
6	183.25		D/K
7	191.25		D/K
8	196.25		B/G
9	199.25		M
10	210.25		B/G
11	224.25		B/G
12	471.25		B/G
13	487.25		I
14	503.25		B/G
15	575.25		B/G
16	583.25		B/G
17	599.25		B/G
18	621.25		M
19	639.25		D/K
20	703.25		B/G
21	735.25		I
22	767.25		B/G
23	815.25		B/G
24	855.25		I
25	855.25		B/G
26	55.25		M
27	83.25		M
28	183.25		M
29	193.25		M
30	217.25		M
31	471.25		M
32	477.25		M
33	693.25		M
34	41.10		
35	112.25		B/G
36	168.25		B/G
37	41.10		
38	294.25		B/G
39	463.25		B/G
40	41.10		
41	647.25		B/G
42	663.25		B/G
43	679.25		B/G
44	174.95		B/G
45	175.55		B/G
46	41.10		
			
99	41.10		




SHIPPING SETTING & CHECKING

(1) The following default data has been factory-set for the E²PROM.

ITEMS	DATA SETTING
LAST PROGRAM/CHANNEL	1
FLASHBACK PROGRAM/CH	1
DIGIT	1
C-SYSTEM	AUTO
S-SYSTEM	B/G
SKIP	OFF
AFC	ON
VOLUME	1
CONTRAST	60 (MAX)
COLOUR	0 (CENTER)
BRIGHTNESS	0 (CENTER)
TINT	0 (CENTER)
SHARPNESS	0 (CENTER)
WHITE TEMP	STANDARD
REMINDER TIMER	In-active, "----:--"
ON TIMER	In-active, "----:--"
OFF TIMER	In-active, "----:--"
LAST POWER	POWER-ON
LANGUAGE	*1
BLUE BACK MUTE	ON
HOTEL MODE	OFF
0 CHANNEL SKIP	ON
LAST TV/AV	TV




ADJUSTMENT PRECAUTIONS: Make sure TV set is in "Normal Condition" before switch to Service Mode for adjustment.

PIF ADJUSTMENT

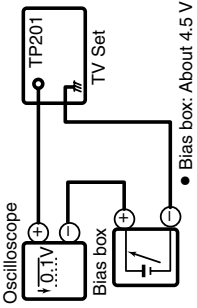No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	Tuner IFT (PRESET)	- Get the tuner ready to receive the CH. E - 9 signal, but with no signal input. Adjust the PLL data. - Connect the sweep generator's output cable to the tuner antenna. (RF SWEEP) - Adjust the sweep generator's to 80dBuV. - Connect the response lead (use LOW IMPEDANCE probe with wave detector ; see Fig.1) to the tuner's IF output terminal. (This terminal must have the probe alone connected). - Set the RF AGC to 0 - 6 V with no saturation with the waveform. - Adjust the tuner IF coil to obtain the waveform as shown in Fig. 2. Note: Be sure to keep the tuner cover in position during this adjustment.	 Fig. 1  Fig. 2
2	RF-AGC TAKE OVER POINT ADJUSTMENT (I ² C BUS CONTROL)	- Receive "PAL COLOUR BAR" signal. - Signal Strength: 57 ± 1 dBuV (75 ohm open) - Connect the oscilloscope to TP201 (Tuner's AGC Terminal) as shown in Fig. 3. 3. Call "AGC" mode in service mode. Adjust the "AGC" bus data to obtain the Tuner output pin drop 0.1V below maximum voltage. 4. Change the antenna input signal to 63-67dBuV, and make sure there is no noise. 5. Turn up the input signal to 90-95 dBuV to be sure that there is no cross modulation beat.	 Fig. 3







7-1

PURITY ADJUSTMENT

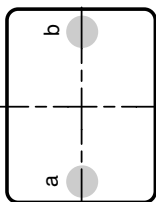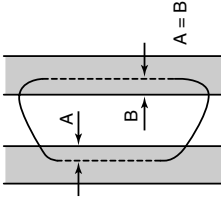
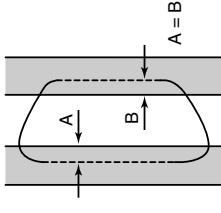
No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	PURITY ADJ.	- Receive the GREEN-ONLY signal. Adjust the beam current to about 700 μA. - Degauss the CRT enough with the degaussing coil. - Maintain the purity magnet at the zero magnetic field and keep the static convergence roughly adjusted. - Observe the points a, b as shown in Fig. 4-1 through the microscope. Adjust the landing to the rank A requirements. - Orient the raster rotation to 0 eastward. - Tighten up the deflection coil screws. - Tightening torque: 108 ± 20 N (11 ± 2 kgf) - Make sure the CRT corners landing meet the A rank requirements. If not, stick the magnet sheet to correct it. Note: This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 700 μA. * For the following colours press R/C RGB key to change.	 Fig. 4-1  Fig. 4-2 Rank "A" (on the right of the CRT)  Rank "A" (on the left of the CRT) * Press R/C RGB key for 1 second in NORMAL MODE, the colour will change to RGB mono colour mode. The TEXT Key "R. G. Cy" Key can be directly use to change to other colours screen.

7-2

CONVERGENCE ADJUSTMENT

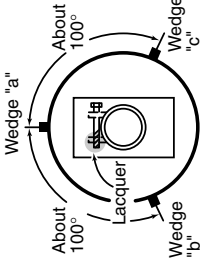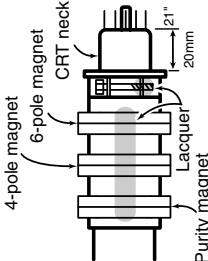No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	CONVERGENCE ADJ. (To be done after the purity adjustment.)	1. Receive the "Crosshatch Pattern" signal. 2. Using the remote controller, call NORMAL mode. STATIC CONVERGENCE 1. Turn the 4-pole magnet to a proper opening angle in order to superpose the blue and red colours. 2. Turn the 6-pole magnet to a proper opening angle in order to superpose the green colour over the blue and red colours. DYNAMIC CONVERGENCE 1. Adjust the convergence on the fringes of the screen in the following steps. a) Fig. 5-1: Drive the wedge at point "a" and swing the deflection coil upward. b) Fig. 5-2: Drive the wedge at points "b" and "c" and swing the deflection coil downward. c) Fig. 5-3: Drive the "c" wedge deeper and swing the deflection coil rightward. d) Fig. 5-4: Drive the "b" wedge deeper and swing the deflection coil leftward. 2. Fix all the wedges on the CRT and apply glass tape over them. 3. Apply lacquer to the deflection yoke lock screw, magnet unit (purity, 4-pole, 6-pole magnets) and magnet unit lock screw. Finally received the Red-only and Blue-only signals to make sure there is no other colours on the screen.	 Fig. 5-1  Fig. 5-2  Fig. 5-3  Fig. 5-4  

CRT CUT-OFF, BACKGROUND AND SUB-CONTRAST ADJUSTMENT

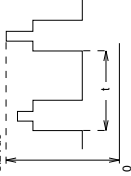No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	CRT CUTOFF ADJUSTMENT (I'FC BUS CONTROL)	Remark 1. Before CRT cutoff adjustment, SUB-BRIGHT, DRI-RS/RW/RC, DRI-GS/GW/GC, DRI-BS/BW/BC, CUT-R and CUT-G must be INITIAL DATA. 2. CRT Cutoff adjustment must be done inside a dark room. 1. Switch TV to VIDEO mode.BLUE BACK OFF, with NO VIDEO signal. 2. Press R/C to set Picture Normal condition. 3. First, off the screen by adjust screen variable resistor. *4. Next, checking AKB circuit function by slowly increase screen variable resistor until colour raster suddenly on and off (AKB start function). 5. Then continue adjust until retrace line appear. 6. Finally, slowly decrease the screen variable resistor until screen retrace line cut off. (Not Raster) Note : Must confirm the AKB function in set before continue the next adjustment.	*Alternative Procedure (1) Step (1), (2), (3) and (4) are same as beside procedure. (2) Then continue adjust until retrace line appear and make sure the colour appear whether red, green or blue (3) Connect the oscilloscope to related test points as below which is based on colour appear at (2) RED = TP47R, GREEN = TP47G, BLUE = TP47B. (4) Then adjust Screen VR until the tip of signal reach 3.2Vdc. 
2	SUB-BRIGHTNESS ADJUSTMENT (I'FC BUS CONTROL)	1. Call " SUB-BRI" in service mode. (Receive Cross-hatch pattern with 5 black level windows) 2. Adjust the " SUB BRIGHT " bus data in order that the line 1 and 2 have the same darkness whereas line 3 is one step (data) brighter than line 2. Finally data minus 1 to make line 1, 2, and 3 are in same level (darkness).	 Line 3 is one step (data) brighter than line 2 
3	WHITE BALANCE SERVICE ADJ. (I'FC BUS CONTROL)	1. Receive the "WHITE" pattern with BURST signal. 2. Press R/C to set Picture NORMAL condition. 3. Connect the DC milliammeter between TP602 (-) TP603 (+). 4. Check Beam current should be around 1100 μA. 5. Set it to service mode and adjust the DRI-GS, & DRI-BS data to have a colour temperature of 12300°K or 18000°K (white). *Note. 6. Receive "WHITE" pattern, WITH BURST signal, and set BRIGHTNESS Y by generator, to **10 cd/m2 (MINOLTA CA-100) by reducing LUMINATEY signal. 7. Adjust "CUT-R" & "CUT-G" to get desired colour temperature #. Then go back NORMAL mode (HIGH BRIGHT**) to check colour temperature. If out of range, back to (1). Note: This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 700μA. * ADJUST DRI-GC/GW, DRI-BC/BW AS FOLLOWING DATA, AFTER FINISHING DRI-BS AND DRI-GS DATA ADJUSTMENT. DRI-RW = 32 (FIXED), DRI-RS = 32 (FIXED) DRI-BC = "DRI-BS" (For 12300°K and 18000°K Condition)	Refer to Page 9-2 # 12300°K X: 0.272 Y: 0.275 # 18000°K X: 0.255 Y: 0.255 (MINOLTA COLOUR ANALYZER CA-100) *Note: Above Data can be UP/DOWN by Volume key. LOW HIGH 20"/21" 10cd/m2 120cd/m2 * 12300°K DRI-GW="DRI-BS"-7 DRI-BW="DRI-BS"-7 DRI-GC="DRI-GS"-7 DRI-RC=25 * 18000°K DRI-GW="DRI-BS"-7 DRI-BW="DRI-BS"-7 DRI-GC="DRI-GS"-5 DRI-RC=27

CRT CUT-OFF, BACKGROUND AND SUB-CONTRAST ADJUSTMENT (Continued)

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
4	Max beam check	1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Connect the DC milliammeter between TP603 (+) & TP602 (-). 4. Beam current must be within $1100 \pm 100 \mu\text{A}$. (Full Scale: 3 mA Range)	


HORIZONTAL AND VERTICAL DEFLECTION LOOP ADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	V-SLOPE (I ² C BUS CON-TROL)	1. Receive Monoscope Pattern Signal. 2. Call the "V-LIN" mode. 3. Increase or decrease "V-LIN" by Volume key till the horizontal line in the center of monoscope is just at the position where the blanking starts.	
2	V-SHIFT-50 (I ² C BUS CON-TROL)	1. Call the "V-CENT" mode. 2. Increase or decrease "V-CENT" by Volume key till the picture is centered.	
3	V-AMP50 (I ² C BUS CON-TROL)	1. Call the "V-AMP" mode. 2. Increase or decrease "V-AMP" by Volume key to set overscan of 9.5% typical. Adjustment Spec 9.5% range +1% -0%.	
4	H-SHIFT (50) (H-CENTER)	1. Call the "H-CENT" mode. 2. Increase or decrease "H-CENT" by Volume key to center the picture horizontal.	
5	S-CORREC-TION (I ² C BUS CON-TROL)	1. SET DATA TO 20(21*), 17(20'). * Check the E-5 CH Monoscope Pattern then re-adjust V-Slope, V-Shift and V-Amp to makesure adjustment is in acceptable Ring-Shaped.	
6	SUB-SHARP-NESS	1. SET DATA TO 20.	
1	Focus	1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Adjust the focus control to get the best focusing.	


PAL CHROMA ADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	SUB COLOUR (I ² C BUS CON-TROL)	1. Receive the "PAL Colour Bar" signal. 2. Press R/C to set Picture Normal condition. 3. Connect the oscilloscope to Red Cathode(D882 Cathode) for 21" (Normal Neck). Red Cathode(D881 Cathode) for 20" (Mini Neck). • Range : 20 V/div. (AC) (Using 10:1 probe) • Sweep time : 10 $\mu\text{sec/div}$.	

PAL CHROMA ADJUSTMENT (Continued)

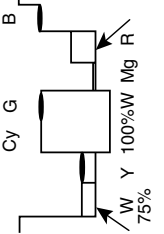No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	SUB COLOUR (I ² C BUS CON-TROL)	4. Using the R/C call "SUB COL" in SERVICE mode. Adjust SUB COLOUR bus data, so that the 75% White & Red portions of PAL Color Bar be at the same level shown as Fig. 1-1. *Before adjust SUB-COL, make sure COL-OP=8, COL-OS=8, COL-O3=4, COL-O4=4. After adjust SUB-COL, set COL-OP=14, COL-OS=14, COL-O3=10, COL-O4=10. 5. Clear the SERVICE mode.	 Fig. 1-1

NTSC CHROMA ADJUSTMENT

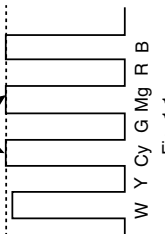No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	SUB-TINT (I ² C BUS CON-TROL)	1. Receive the "NTSC 3.58 Colour Bar" signal thru AV in. 2. Connect the oscilloscope to TP47B (P882 pin 5) BLUE-OUT. • Range : 100mV/div (AC)(Use Probe 10:1) • Sweep time : 10 $\mu\text{sec/div}$. 3. Call the "SUB-TINT" mode in service mode. Adjust the "SUB-TINT" bus data to obtain the waveform shown as Fig. 1-1. 4. Clear the SERVICE mode.	 Fig. 1-1

PROTECTOR OPERATION CHECKING

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	BEAM PRO-TECTOR	1. Receive "Monoscope Pattern" signal. 2. Set CONTRAST MAX. 3. Set BRIGHT MAX. 4. During the Collector & Emitter of Q883/5/7 short, make sure the protector ON and switch to standby mode.	* Select one of Q883/5/7 to do each short test
2	H. V PROTEC-TOR	1. Receive "Monoscope Pattern" signal. 2. Connect output of Bias Box to D603 cathode (R610 side). 3. Set voltage of Bias Box to 18V and make sure the protector is not work. 4. Set voltage of Bias Box to 27V, and make sure the protector is work.	
3	Other protectors	1. Once finish rectified Electrolytic Capacitor short testing in +B line, check all possible damaged components on +B line. (Use random selected set for inspection)	

A/V INPUT AND OUTPUT CHECKING

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	VIDEO AND AUDIO OUTPUT CHECK	1. Receive the "PAL Color Bar" signal (100% White Color Bar, Sound 400 Hz, 100% Mod). 2. Terminate the Video output with a 75 ohm impedance. Make sure the output is as specified (1.0 Vp-p $\pm$3 dB). 3. Terminate the Audio output with a 10k ohm impedance. Make sure the O/P is as specified (1.76 Vp-p $\pm$3 dB).	
2	VIDEO AND AUDIO INPUT CHECK	1. Using the TV/AV key on the remote controller, make sure that the modes change in order of TV, AV & TV again and the video & audio output are according to the input terminal for each mode. If connect input to Front and Rear AV terminal, input terminal of Front AV will be selected.	

FUNCTION OPERATION CHECKING (VIDEO AND AUDIO)

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	CONTRAST key	1. Receive "Monoscope Pattern" signal. 2. Set P-Mode to select CONTRAST. 3. Press Volume Up/Down key to check whether the CONTRAST effect is OK or not.	
2	COLOUR key	1. Receive "Color Bar" signal. 2. Set P-Mode to select COLOUR. 3. Press Volume Up/Down key to check whether the COLOUR effect is OK or not.	
3	BRIGHTNESS key	1. Receive "Monoscope Pattern" signal. 2. Set P-Mode to select BRIGHTNESS. 3. Press Volume Up/Down key to check whether the BRIGHTNESS effect is OK or not.	
4	TINT key	1. Receive the "NTSC Colour Bar" signal thru AV in. 2. Set P-Mode to select TINT. 3. Press Volume Up/Down key to check TINT, UP for GREEN direction and DOWN for PURPLE direction whether is OK or not.	
5	SHARPNESS key	1. Receive "Monoscope Pattern" signal. 2. Set P-mode to select SHARPNESS. 3. Press Volume Up/Down key to check whether the SHARPNESS effect is OK or not.	
6	CH DISPLAY COLOUR	1. All Ch (1-99) will have an OSD display of the channel number in green colour under AFT ON condition.	

FUNCTION OPERATION CHECKING (VIDEO AND AUDIO) (Continued)

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
7	NORMAL Key	1. Once in PICTURE Mode, and the NORMAL key is pressed, all the settings will be present to normal setting. (Normal setting value for every mode). ● CONTRAST : MAX ● COLOUR : CENTER ● BRIGHTNESS : CENTER ● TINT : CENTER ● SHARPNESS : CENTER	Notes: If nothing is display mean contrast, colour, bright, tint, sharpness are all in normal setting.
8	WHITE TEMP	1. Receive "Monoscope Pattern" signal. 2. Set FUNCTION to select WHITE TEMP. 3. Press Volume Up/Down key to check WHITE TEMP Option. STANDARD: NORMAL SETTING, WARM for more REDDISH direction changing, COOL for more BLUISH direction changing.	
9	COLOUR SYSTEM	1. Receive the "PAL COLOUR BAR" signal, press the COLOUR SYSTEM key to select modes except PAL, check the COLOUR is not working properly. Then, select the "PAL" mode. Check again its colour so that it is working properly. 2. Receive "SECAM COLOUR BAR" signal, press COLOUR SYSTEM key to select modes except SECAM, check the COLOUR is not working properly. Then, select the "SECAM" mode. Check again its colour so that it is working properly. 3. Receive "NTSC 4.43" signal, press COLOUR SYSTEM key to select modes except NTSC 4.43, check the COLOUR is not working properly. Then, select the "NTSC 4.43" mode. Check again its colour so that it is working properly. 4. Receive "NTSC 4.43/3.58 COLOUR BAR" signal thru AV, press COLOUR SYSTEM key to select modes except N4.43/3.58, check the COLOUR is not working properly. Then, select the "NTSC 4.43/3.58" mode. Check again its colour so that it is working properly.	

FUNCTION OPERATION CHECKING (VIDEO AND AUDIO)
(Continued)

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
10	SOUND SYSTEM	1. Receive "PAL-D/K" signal, press the "SOUND SYSTEM" to select B/G, I. Check the sound output is not working properly. Select D/K and check the sound output to make sure it is working properly. 2. Receive "PAL-I" signal, press the "SOUND SYSTEM" to select B/G, D/K. Check the sound output is not working properly. Select I and check the sound output to make sure it is working properly. 3. Receive "PAL-B/G" signal, press the "SOUND SYSTEM" to select I, D/K. Check the sound output is not working properly. Select B/G and check the sound output to make sure it is working properly.	
11	NOISE MUTE CHECKING	1. Receive "PAL COLOUR BAR" signal. 2. Turn up the volume control to maximum, make sure the sound is heard from the speakers. Then put the unit in no signal state. 3. Check the sound mute is effective. 4. Finally turn sound level of CTV to minimum.	
12	OSD LANGUAGE QUANTITY CHECK	Check OSD LANGUAGE quantity and type as English, Russian, Chinese, French, Arabic and Malay.	

HEADPHONE JACK CHECKING

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	HEADPHONE OUTPUT CHECKING	1. Receive PAL COLOUR BAR with SOUND 400Hz, 100% MODULATION ($\pm 50\text{kHz}$ Dev). 2. Maximum volume, and check the headphone output with 400Hz sound and no sound out from speaker.	

20D2-S/G
21D1-S/G
21D2-S/G

12-1

12-2

13-1

[illegible]


ADDRESS (HEX)	D7	D6	DATA					D0	MICON DEFAULT	EEPROM RANGE	EEPROM INTERLOCK	CHASSIS		CTV FINAL	REMARKS
			D5	D4	D3	D2	D1					CHECK DATA	CHECK TYPE		
100		5SVS		AFT	(640)			C:SVS							POS 46
101			TUNING FREQUENCY (HIGHER PART)												POS 47
102			TUNING FREQUENCY (LOWER PART)												
103		5SVS		AFT	(640)			C:SVS							
104			TUNING FREQUENCY (HIGHER PART)												
105			TUNING FREQUENCY (LOWER PART)												POS 48
106		5SVS		AFT	(640)			C:SVS							
107			TUNING FREQUENCY (HIGHER PART)												POS 49
108			TUNING FREQUENCY (LOWER PART)												
109		5SVS		AFT	(640)			C:SVS							
10A			TUNING FREQUENCY (HIGHER PART)												POS 50
10B			TUNING FREQUENCY (LOWER PART)												
10C		5SVS		AFT	(640)			C:SVS							POS 51
10D			TUNING FREQUENCY (HIGHER PART)												
10E			TUNING FREQUENCY (LOWER PART)												
10F		5SVS		AFT	(640)			C:SVS							POS 52
110			TUNING FREQUENCY (HIGHER PART)												
111			TUNING FREQUENCY (LOWER PART)												POS 53
112		5SVS		AFT	(640)			C:SVS							
113			TUNING FREQUENCY (HIGHER PART)												
114			TUNING FREQUENCY (LOWER PART)												POS 54
115		5SVS		AFT	(640)			C:SVS							
116			TUNING FREQUENCY (HIGHER PART)												
117			TUNING FREQUENCY (LOWER PART)												POS 55
118		5SVS		AFT	(640)			C:SVS							
119			TUNING FREQUENCY (HIGHER PART)												
11A		5SVS		AFT	(640)			C:SVS							POS 56
11B			TUNING FREQUENCY (HIGHER PART)												
11C			TUNING FREQUENCY (LOWER PART)												POS 57
11D		5SVS		AFT	(640)			C:SVS							
11E			TUNING FREQUENCY (HIGHER PART)												
120			TUNING FREQUENCY (LOWER PART)												POS 58
121		5SVS		AFT	(640)			C:SVS							
122			TUNING FREQUENCY (HIGHER PART)												POS 59
123			TUNING FREQUENCY (LOWER PART)												
124		5SVS		AFT	(640)			C:SVS							
125			TUNING FREQUENCY (HIGHER PART)												POS 60
126			TUNING FREQUENCY (LOWER PART)												
127		5SVS		AFT	(640)			C:SVS							POS 61
128			TUNING FREQUENCY (HIGHER PART)												
129			TUNING FREQUENCY (LOWER PART)												POS 62
12A		5SVS		AFT	(640)			C:SVS							
12B			TUNING FREQUENCY (HIGHER PART)												POS 63
12C			TUNING FREQUENCY (LOWER PART)												
12D		5SVS		AFT	(640)			C:SVS							POS 64
12E			TUNING FREQUENCY (HIGHER PART)												
12F			TUNING FREQUENCY (LOWER PART)												POS 65
130		5SVS		AFT	(640)			C:SVS							
131			TUNING FREQUENCY (HIGHER PART)												POS 66
132			TUNING FREQUENCY (LOWER PART)												
133		5SVS		AFT	(640)			C:SVS							POS 67
134			TUNING FREQUENCY (HIGHER PART)												
135			TUNING FREQUENCY (LOWER PART)												
136		5SVS		AFT	(640)			C:SVS							POS 68
137			TUNING FREQUENCY (HIGHER PART)												
138			TUNING FREQUENCY (LOWER PART)												POS 69
139		5SVS		AFT	(640)			C:SVS							
13A			TUNING FREQUENCY (HIGHER PART)												POS 70
13B			TUNING FREQUENCY (LOWER PART)												
13C		5SVS		AFT	(640)			C:SVS							POS 71
13D			TUNING FREQUENCY (HIGHER PART)												
13E			TUNING FREQUENCY (LOWER PART)												POS 72
13F		5SVS		AFT	(640)			C:SVS							
MODEL		MODEL								MODEL					

15-1

GA1 HOTEL MODE APPLICATION

How to enable/disable the "Hotel Mode" ?

- Ans: a) Press the R/C (FUNCTION) {1} key until language selection appear, within five second press the (one/two digit) {2} key and keep pressing it for five second, then you can see the hotel mode with four digits pass-word.
- b) Key in the four digits password starting with number "1", "3", "7", "9", then the hotel mode will be enable, you can switch on/off the hotel mode by using R/C (volume up/down) {3} key.

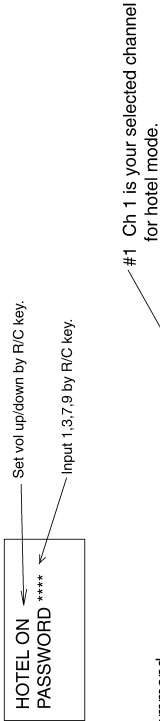


- * We recommend
Before set the hotel mode, it is better to choose ch 1 & set s-vol level Up to 75% full scale.
After set hotel mode, starting channel will be always ch 1 & maximum sound level out will be set the half of full scale.
- * If you set hotel mode in AV, starting channel will be the last ch which you received before power off (same as normal operation)

CONDITION:


When using hotel mode, user can control "contrast", "brightness", "sharpness" and "tint" function.
But after power off, it will return to the initial setting.
You can't use:--

- Preset mode
 - Fine tuning
 - Skip mode
 - System selection
- The others function is allowed to be used.

TROUBLE SHOOTING TABLE




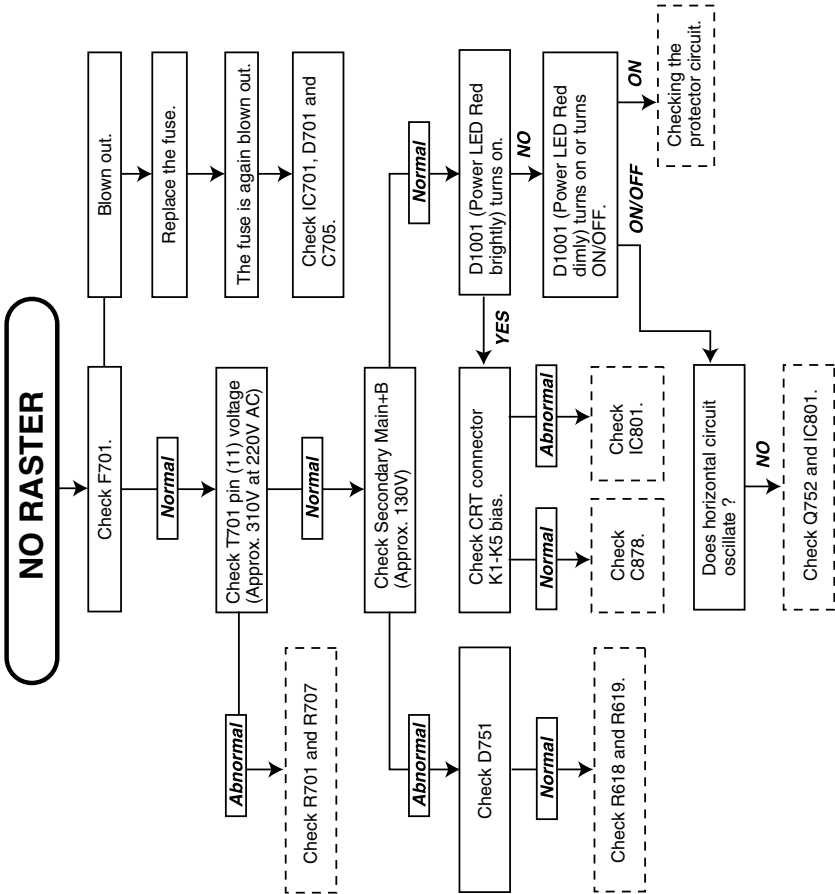


TROUBLE SHOOTING TABLE (Continued)

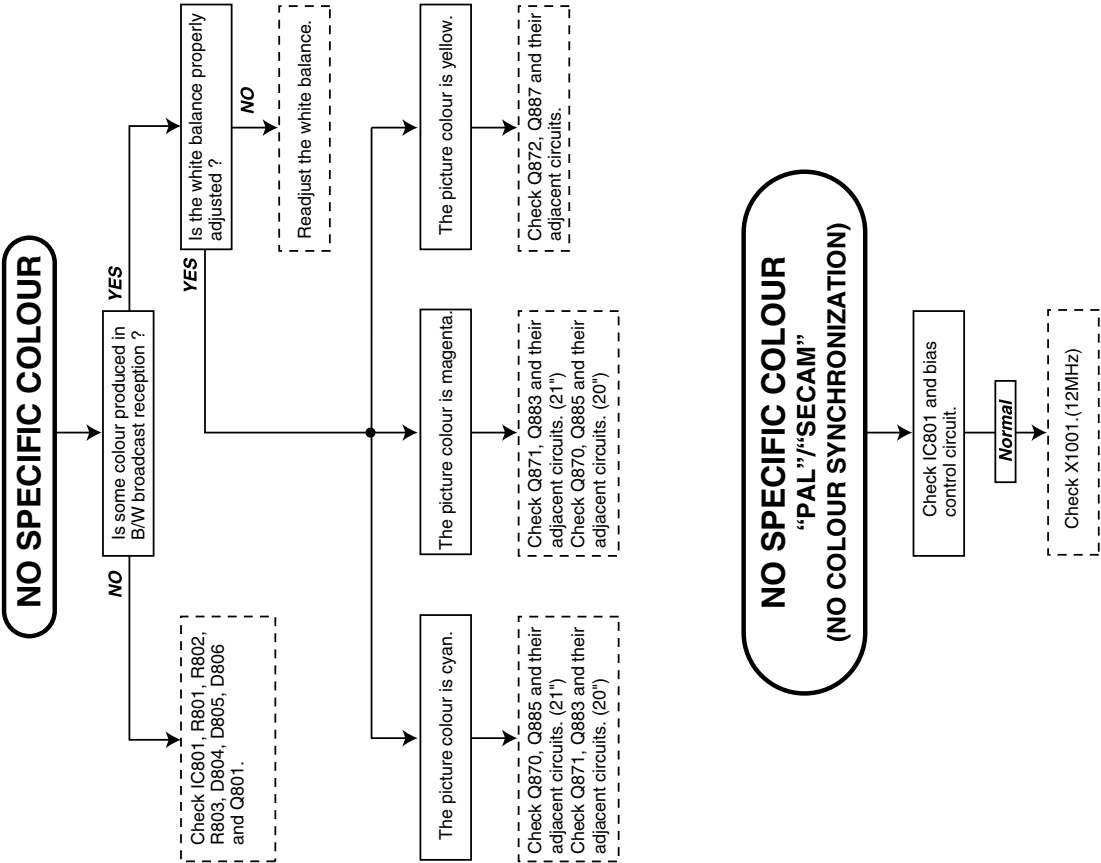


WAVEFORMS

(21D1-S/G, 21D2-S/G)

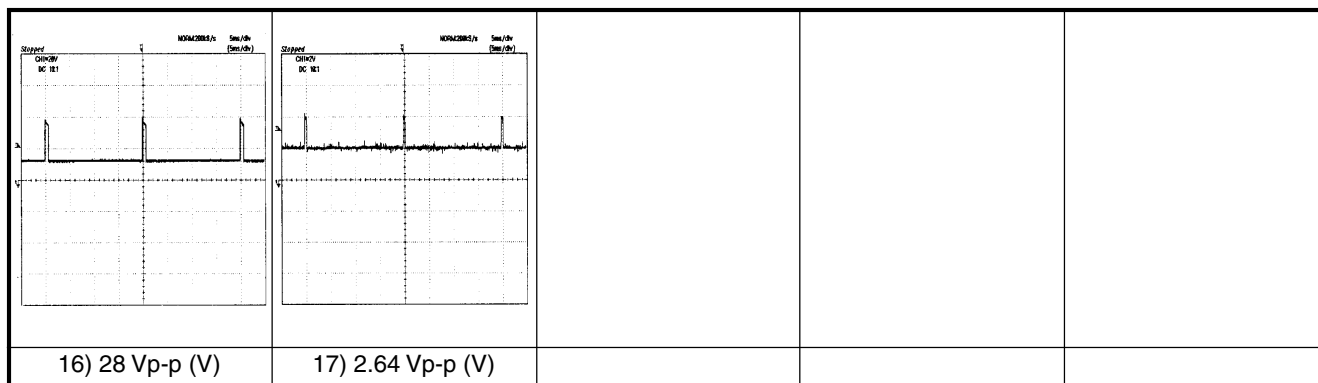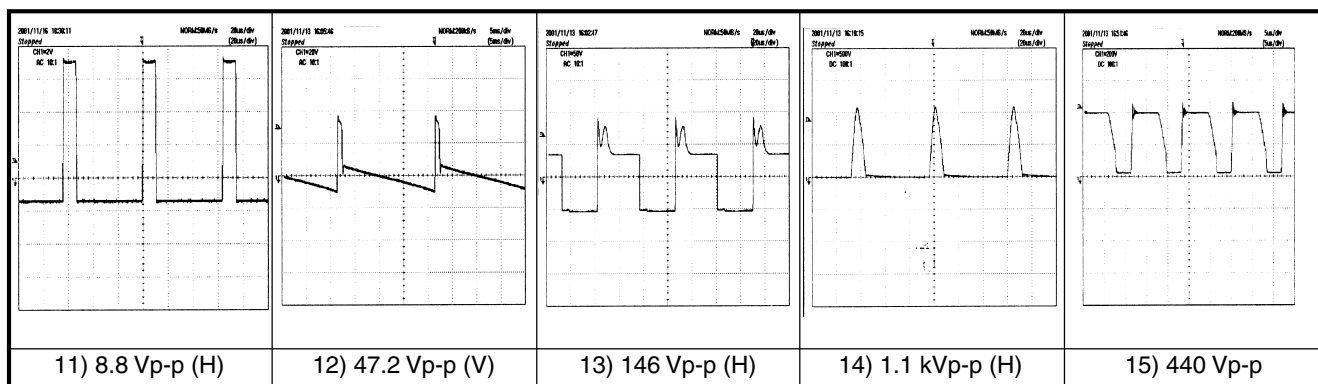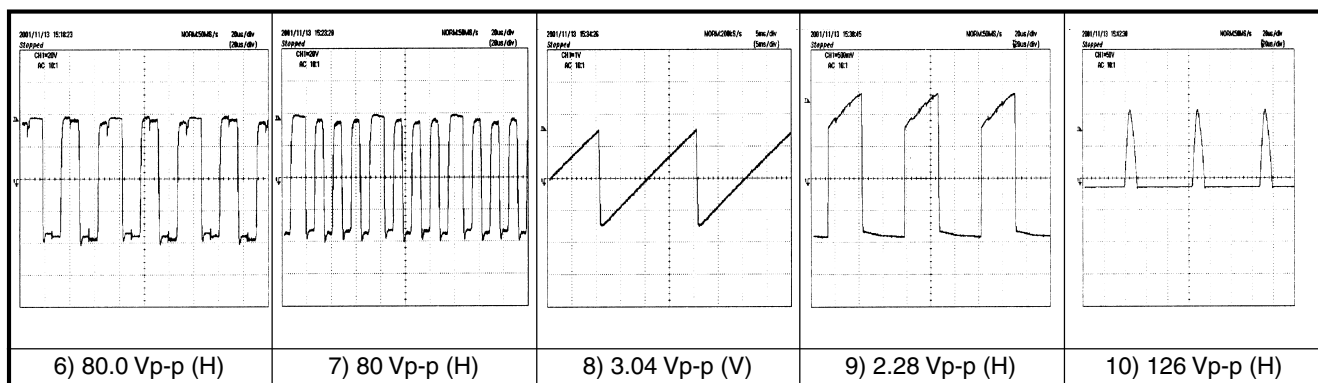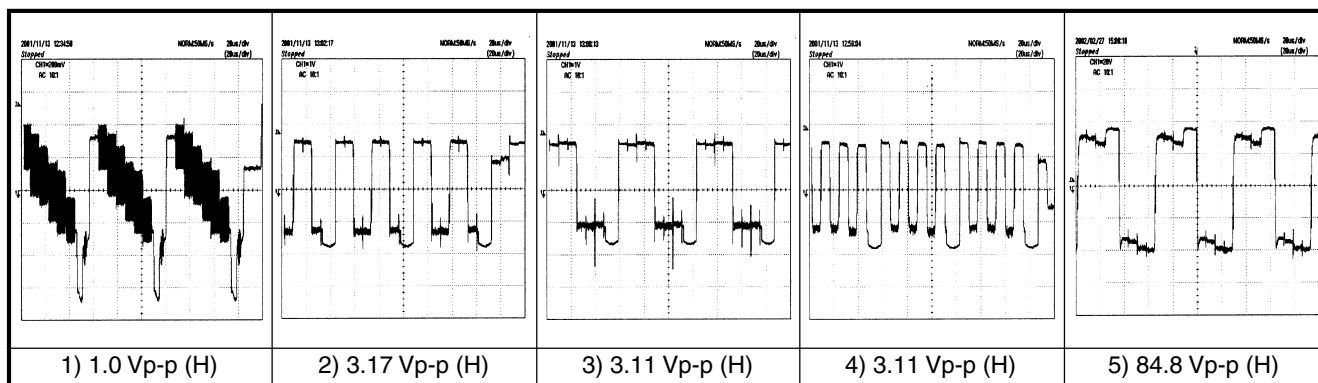


WAVEFORMS

(20D2-S/G)

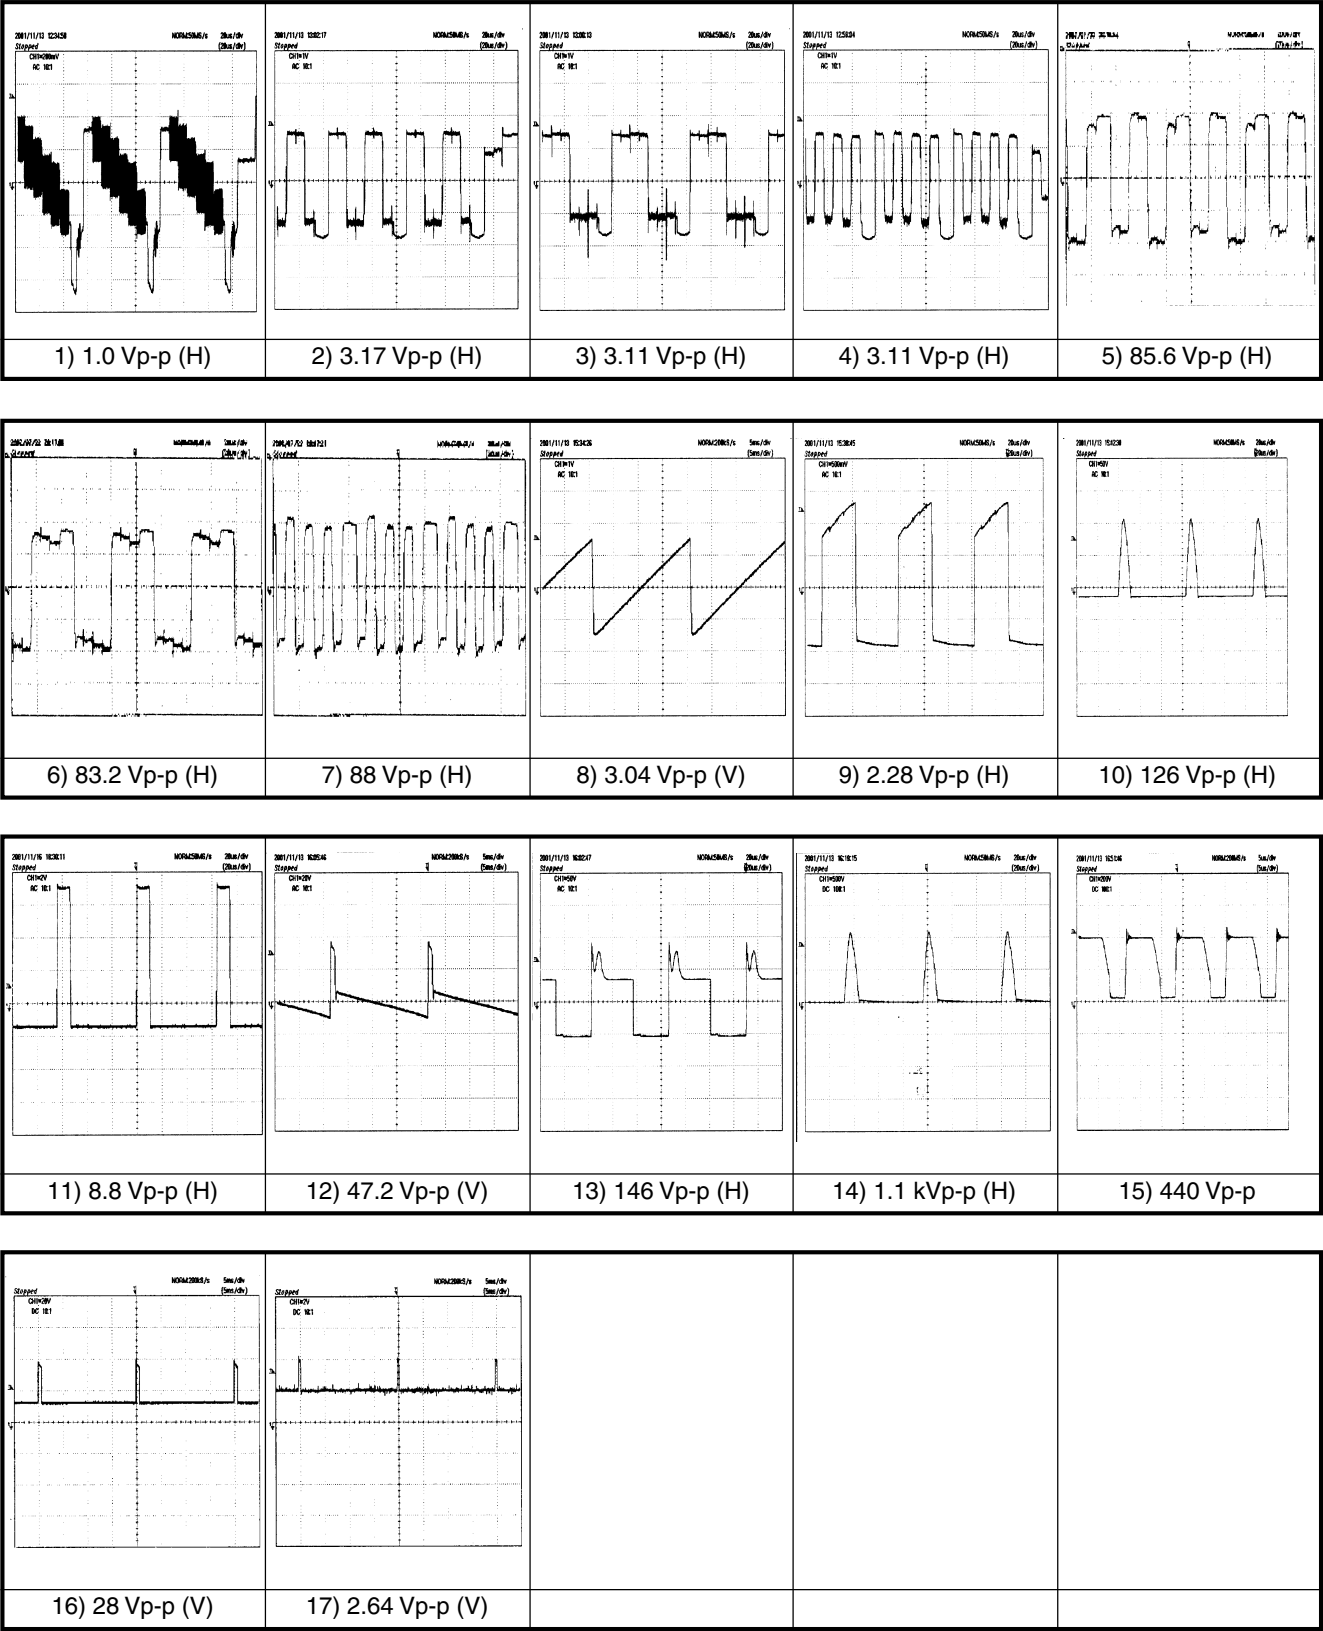


SOLID STATE DEVICE BASE DIAGRAM

TOP VIEW



M24C04



D601A




B709A




IX3368CE


SIDE VIEW

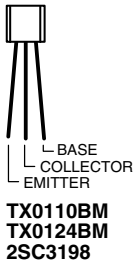


TX0110BM
TX0124BM
2SC3198

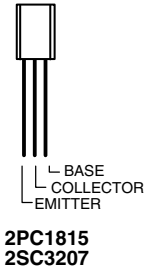


2PC1815
2SC3207

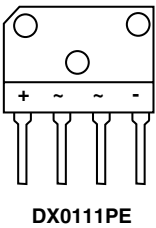


DX0111PE




2SD2586

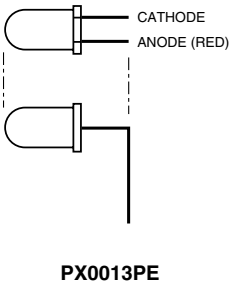


PX0013PE




KA7808A

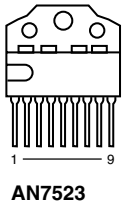

AN7523

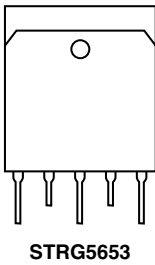

STRG5653

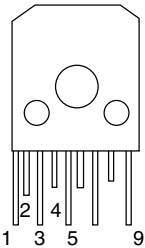


TDA9302

20D2-S/G
21D1-S/G
21D2-S/G

CHASSIS LAYOUT




20D2-S/G

PWB-B
DUNTKA542WE
CRT

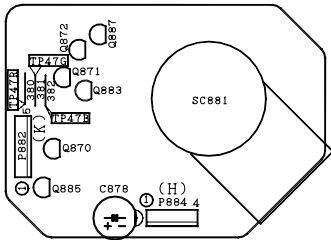


PWB-A
DUNTKA541WE
MAIN

PWB-C
DUNTKA543WE
H/P

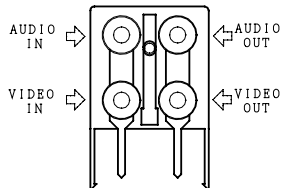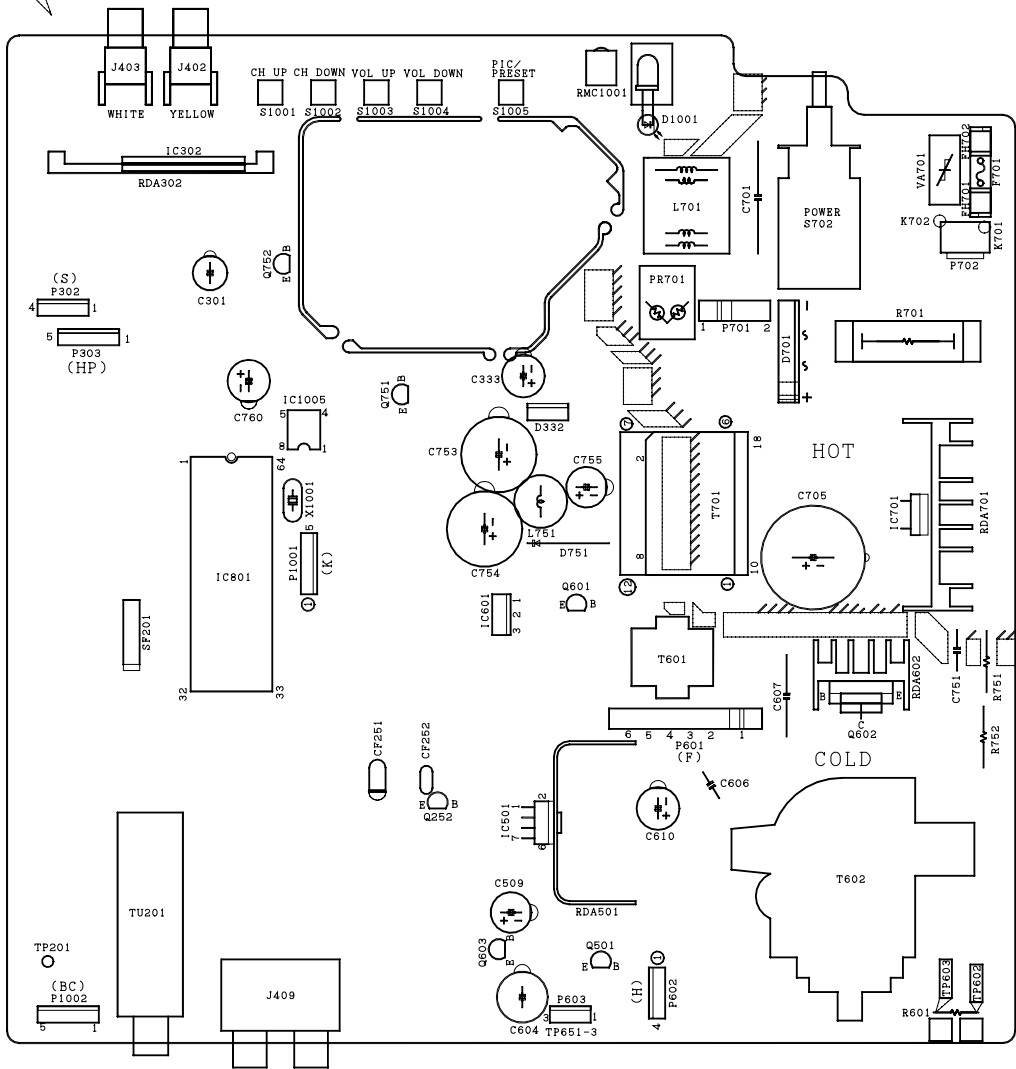




BLOCK DIAGRAM CRT UNIT : 20D2-S/G

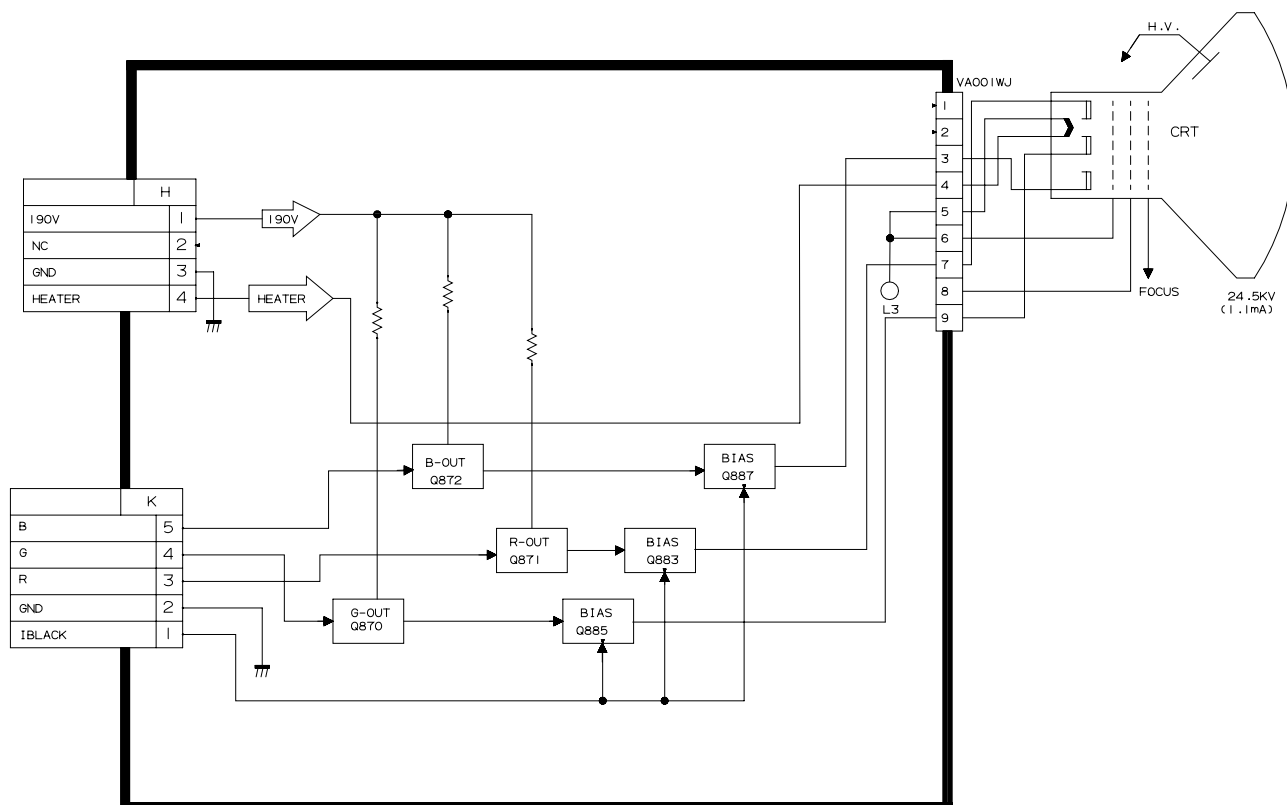


CRT UNIT : 21D1-S/G, 21D2-S/G

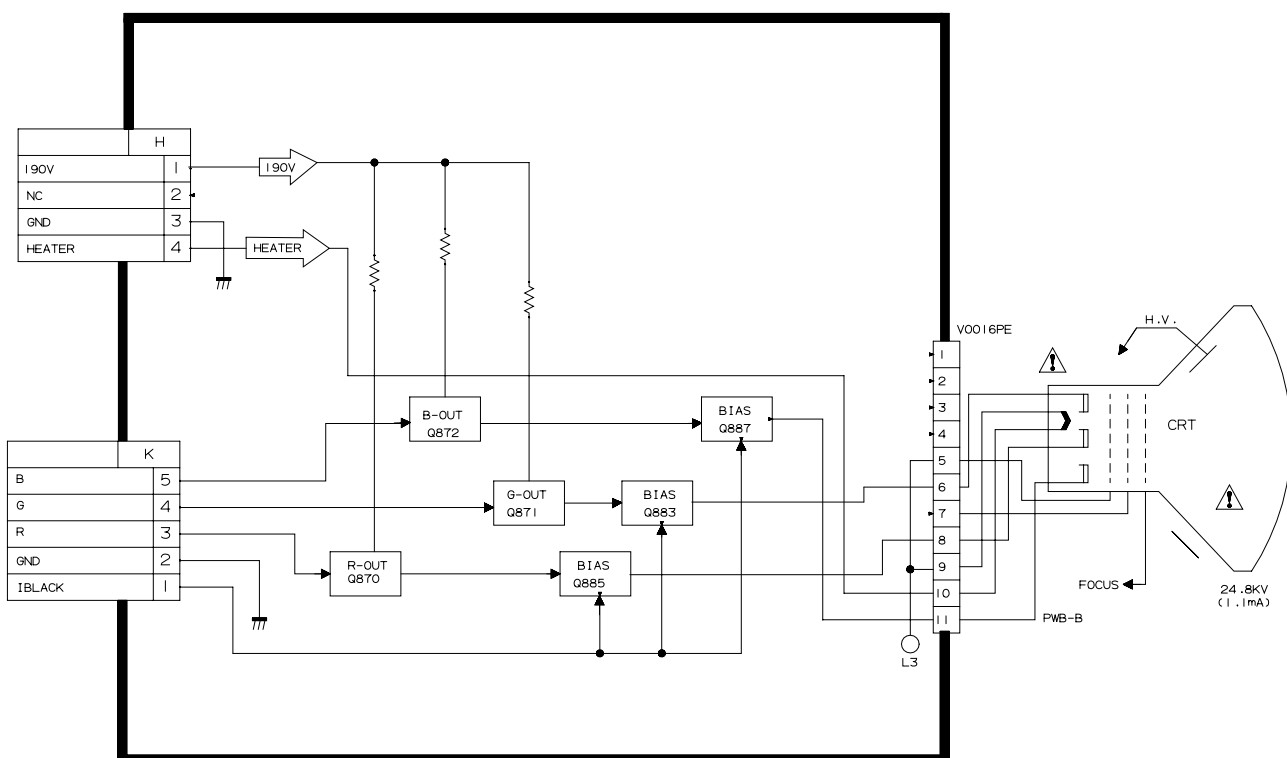


BLOCK DIAGRAM

MAIN UNIT : 20D2-S/G, 21D2-S/G

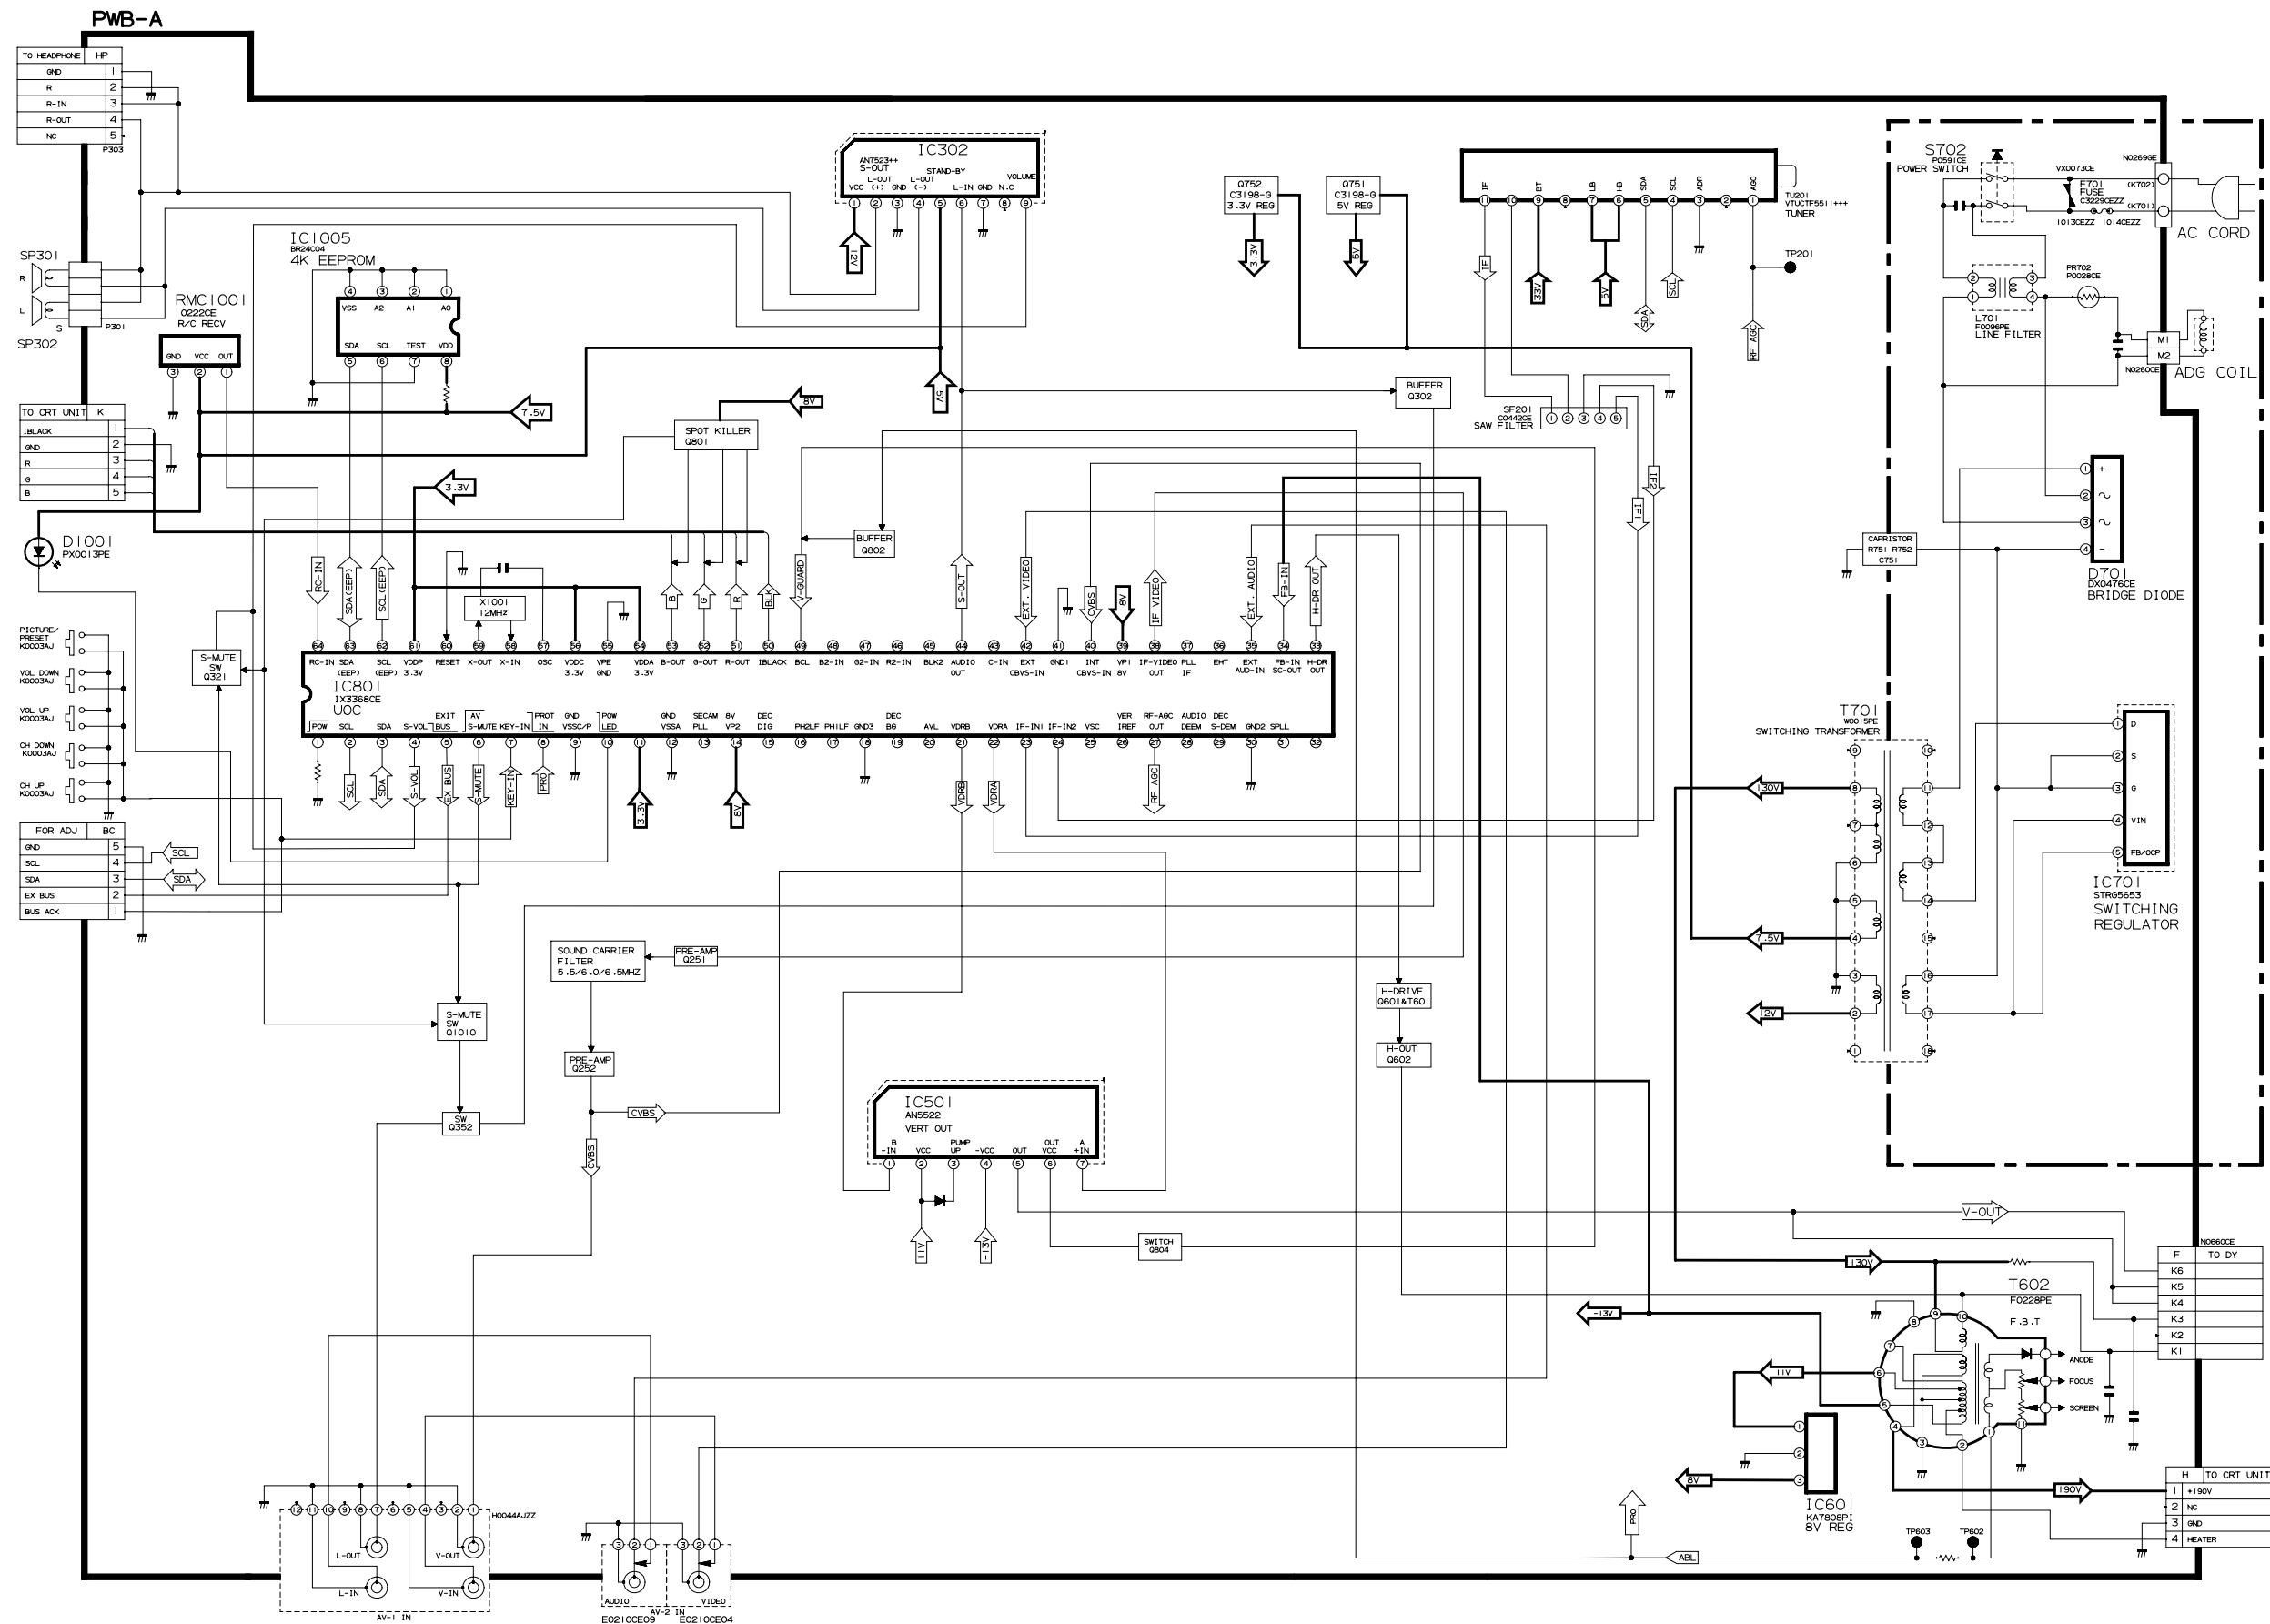


BLOCK DIAGRAM

MAIN UNIT : 21D1-S/G

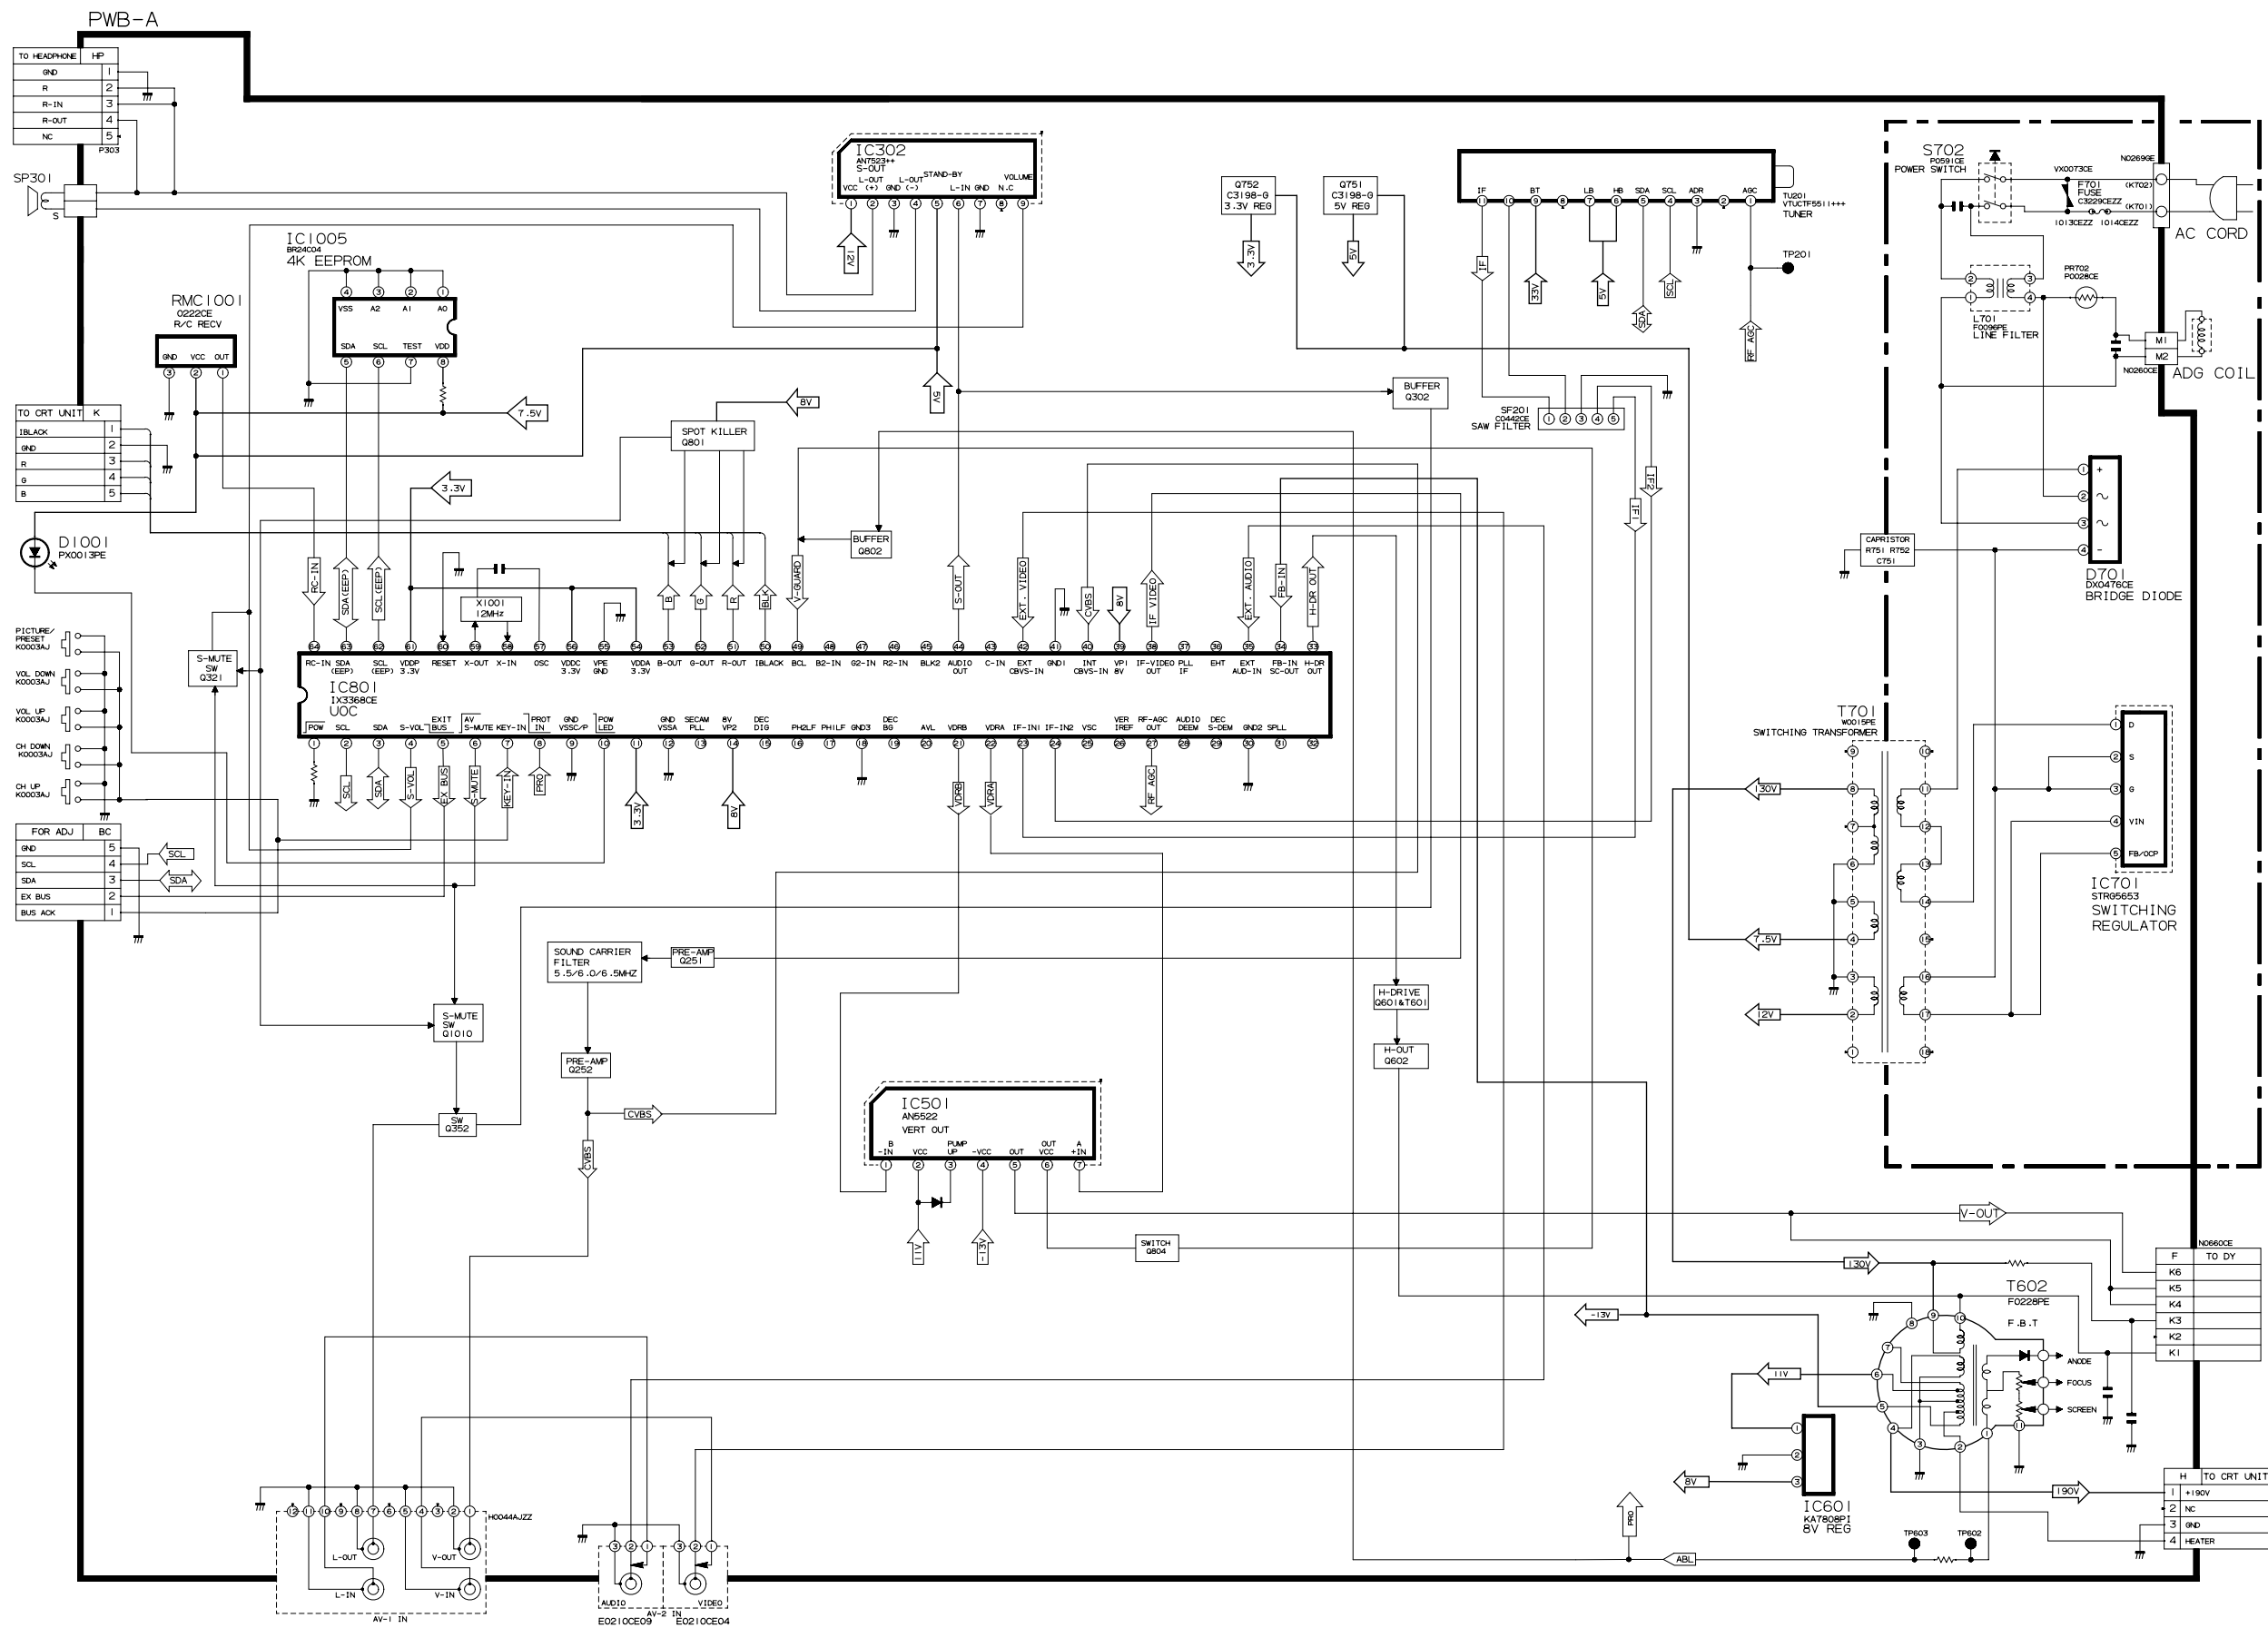

20D2-S/G
21D1-S/G
21D2-S/G

BLOCK DIAGRAM HEADPHONE JACK UNIT

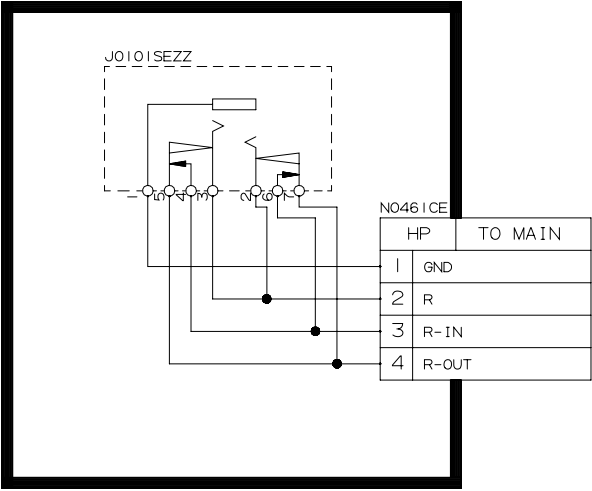

DESCRIPTION OF SCHEMATIC DIAGRAM

SAFETY NOTES:

1. DISCONNECT THE AC PLUG FROM THE AC OUTLET BEFORE REPLACING PARTS.
2. SEMICONDUCTOR HEAT SINKS SHOULD BE REGARDED AS POTENTIAL SHOCK HAZARDS WHEN THE CHASSIS IS OPERATING.

IMPORTANT SAFETY NOTICE:

PARTS MARKED WITH "⚠" () ARE IMPORTANT FOR MAINTAINING THE SAFETY OF THE SET. BE SURE TO REPLACE THESE PARTS WITH SPECIFIED ONES FOR MAINTAINING THE SAFETY AND PERFORMANCE OF THE SET.

SERVICE PRECAUTION:

THE AREA ENCLOSED BY THIS LINE (— - —) IS DIRECTLY CONNECTED WITH AC MAINS VOLTAGE. WHEN SERVICING THE AREA, CONNECT AN ISOLATING TRANSFORMER BETWEEN TV RECEIVER AND AC LINE TO ELIMINATE HAZARD OF ELECTRIC SHOCK.

NOTES:

1. The unit of resistance "ohm" is omitted. (K = 1000 ohms, M = Mega ohm).
2. All resistors are 1/10 watt, unless otherwise noted.
3. All capacitors are μF , unless otherwise noted. (P = $\mu\mu F$).

VOLTAGE MEASUREMENT CONDITIONS:

1. Voltages in parenthesis measured with no signal.
2. Voltages without parenthesis measured with 3mV B & W or Colour signal.
3. All the voltages in each point are measured with VTVM.


WAVEFORM MEASUREMENT CONDITIONS:

1. The colour bar generator signal of 2.0V peak applied at of Base Video Buffer Amp. Q252.
2. Approximately 4V AGC bias .


20D2-S/G
21D1-S/G
21D2-S/G

SCHEMATIC DIAGRAM


CRT UNIT : 20D2-S/G

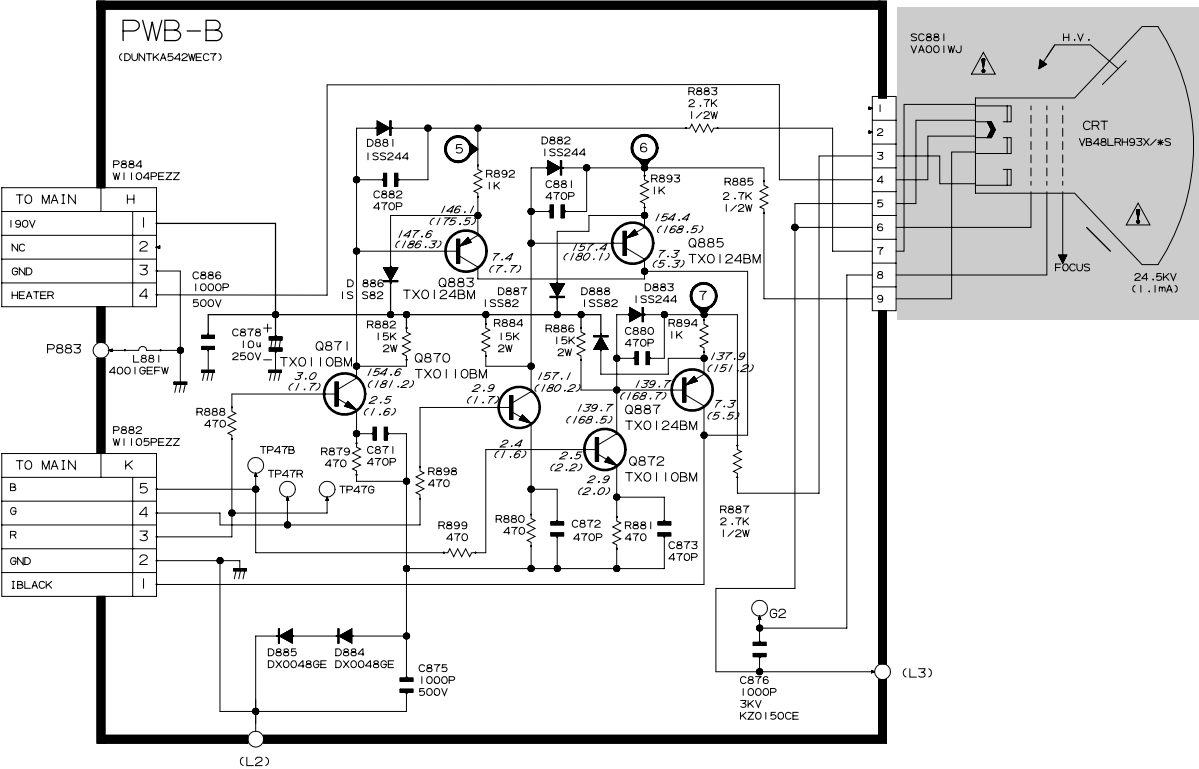


CRT UNIT : 21D1-S/G, 21D2-S/G

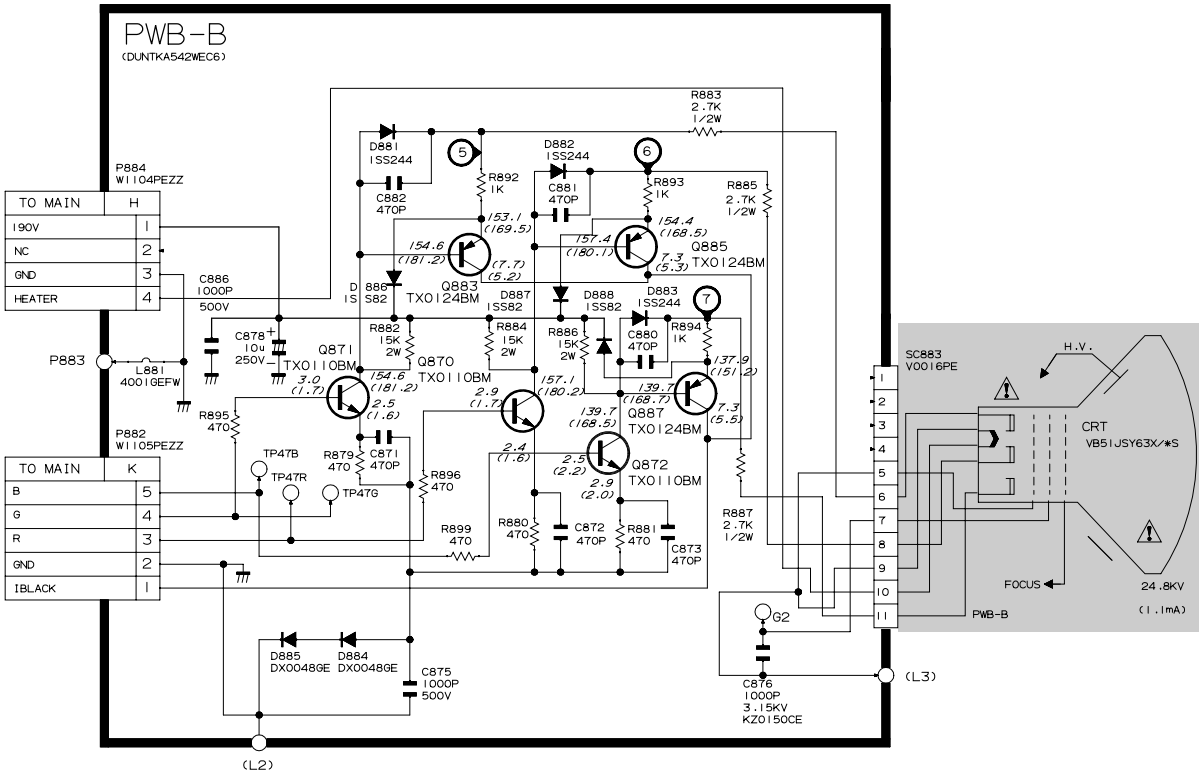


SCHEMATIC DIAGRAM HEADPHONE JACK UNIT

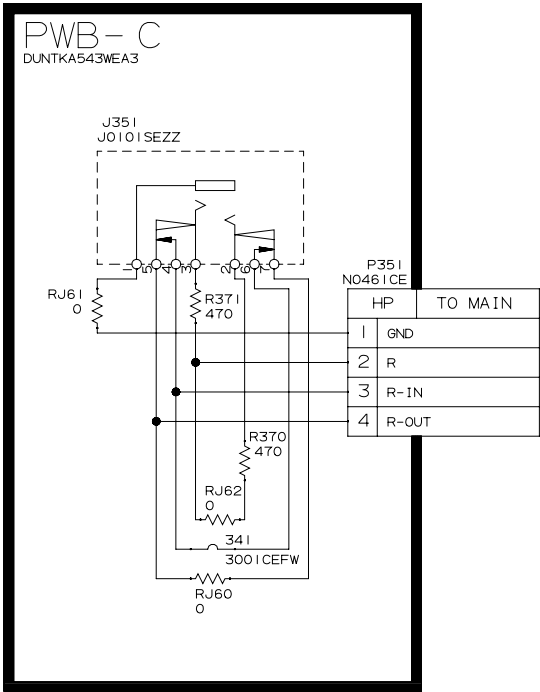

SCHEMATIC DIAGRAM
MAIN UNIT : 20D2-S/G

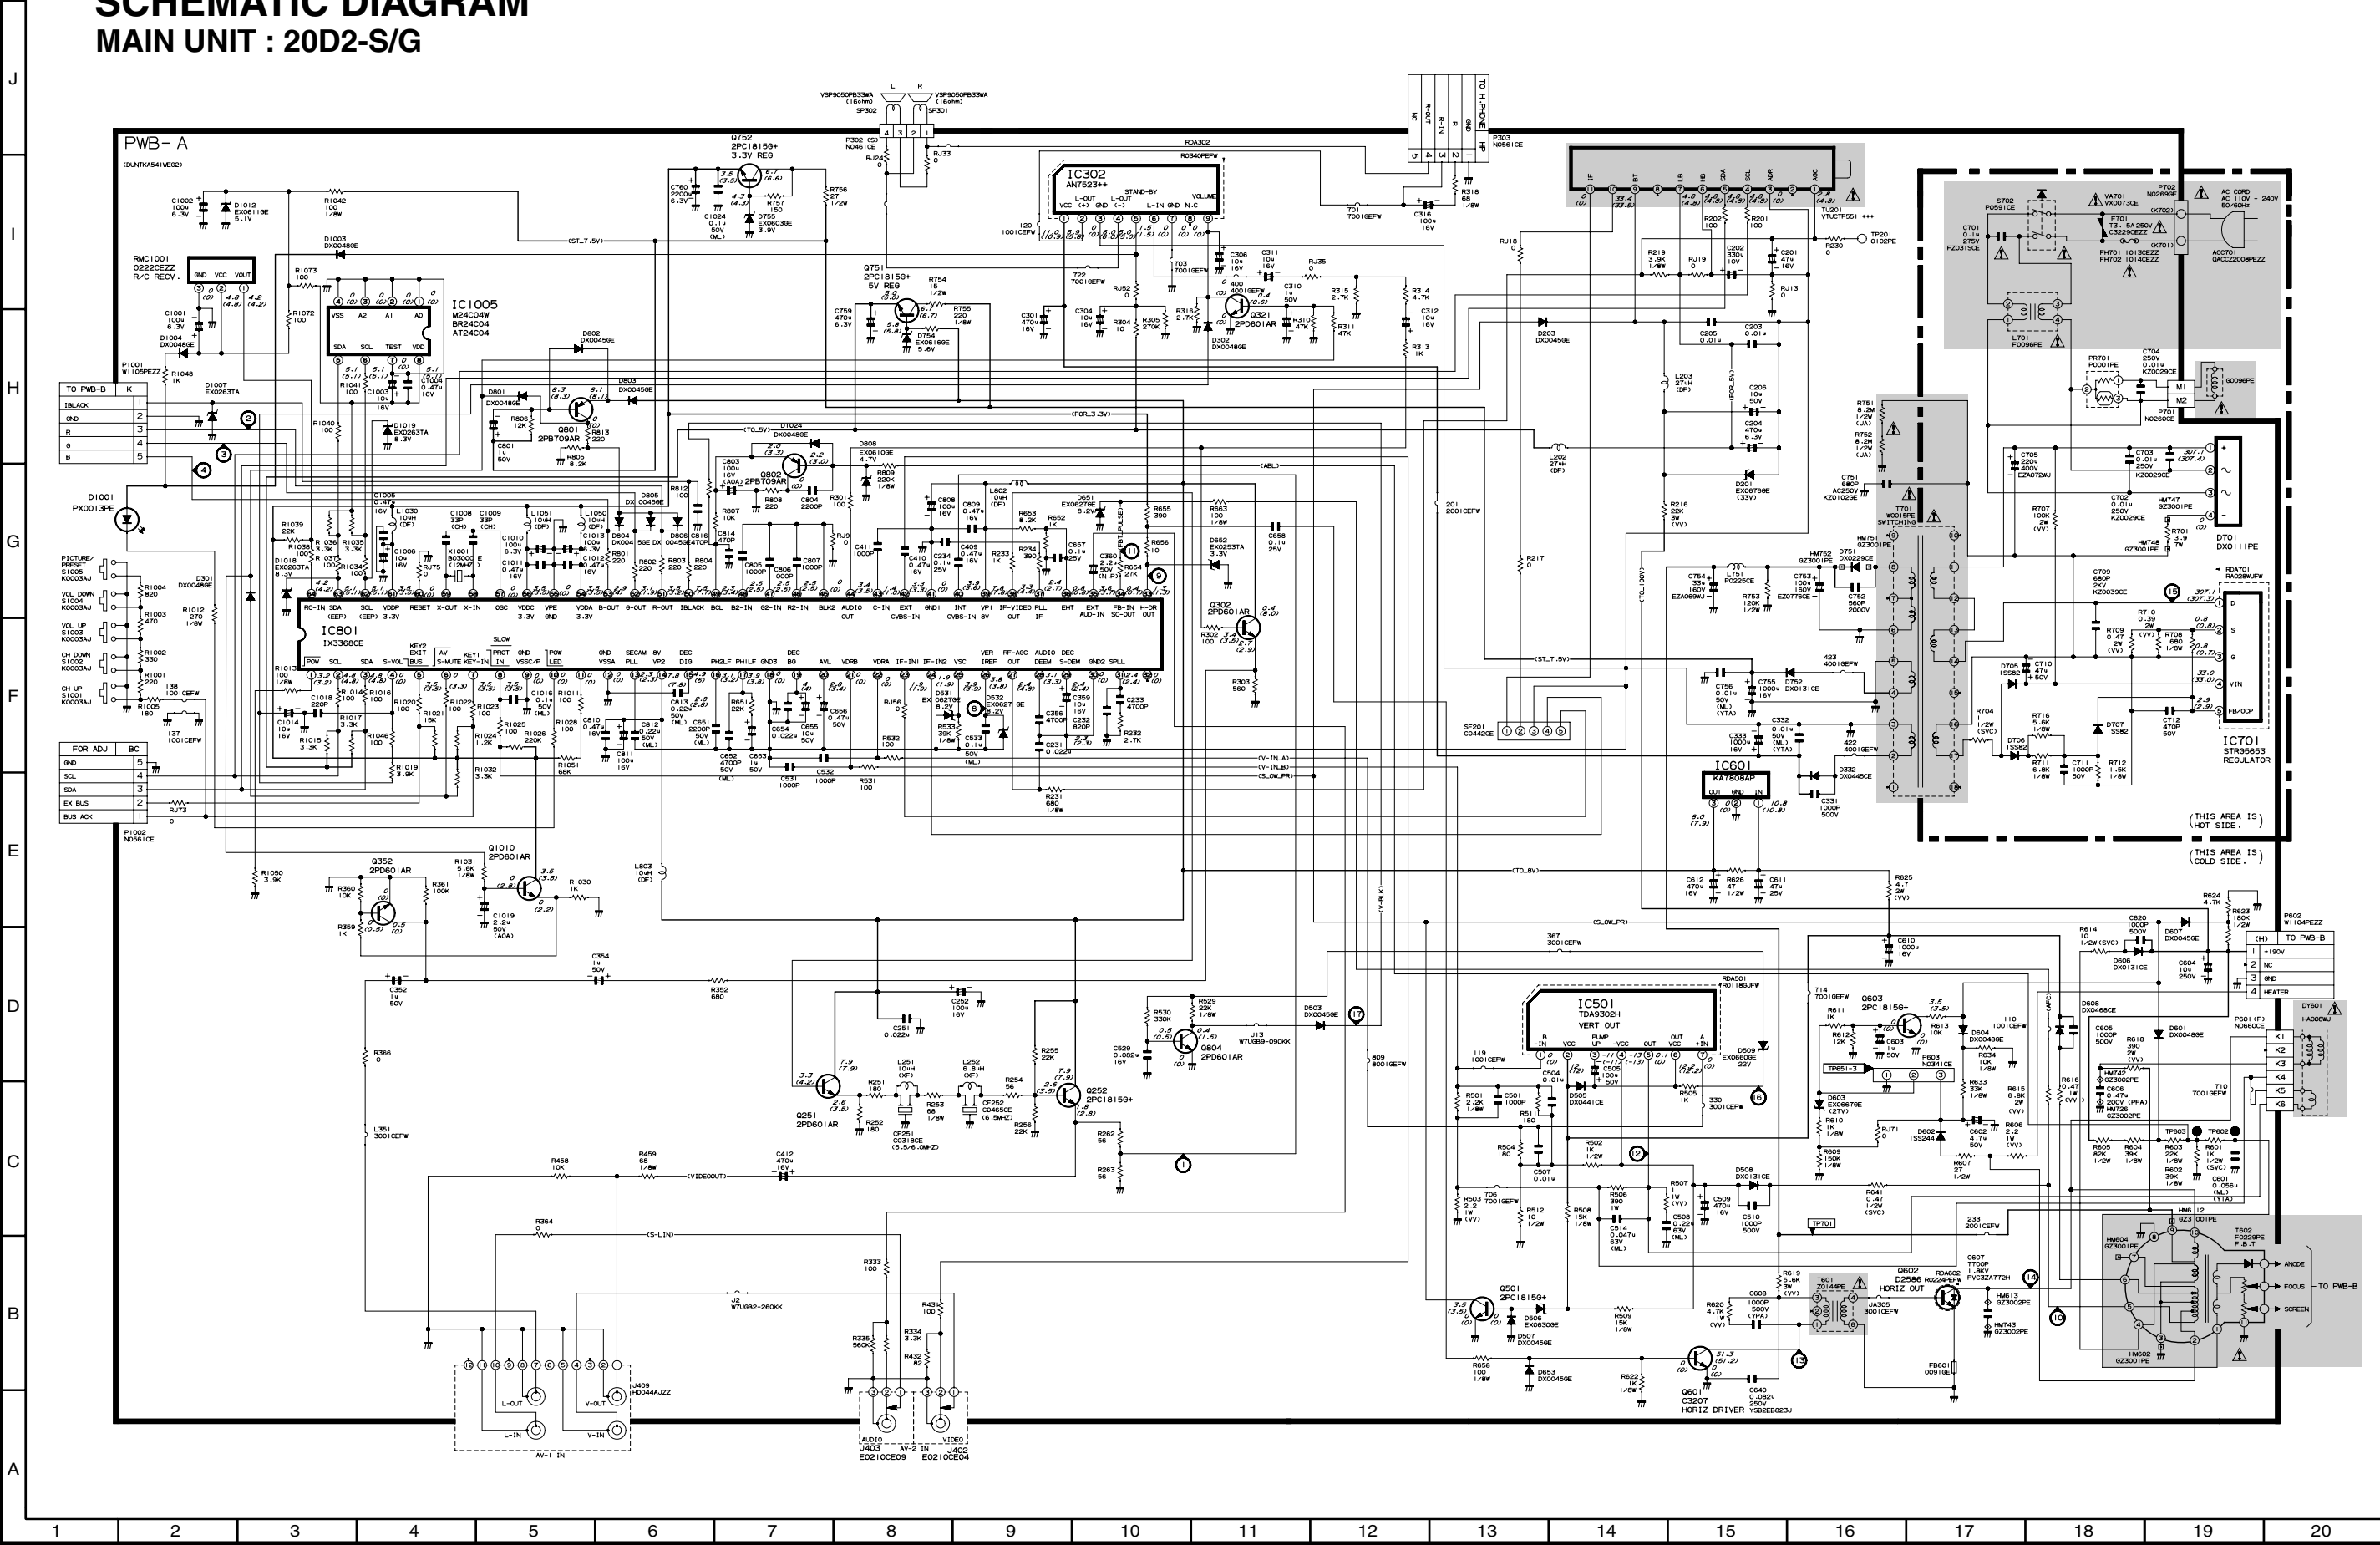

SCHEMATIC DIAGRAM
MAIN UNIT : 21D1-S/G

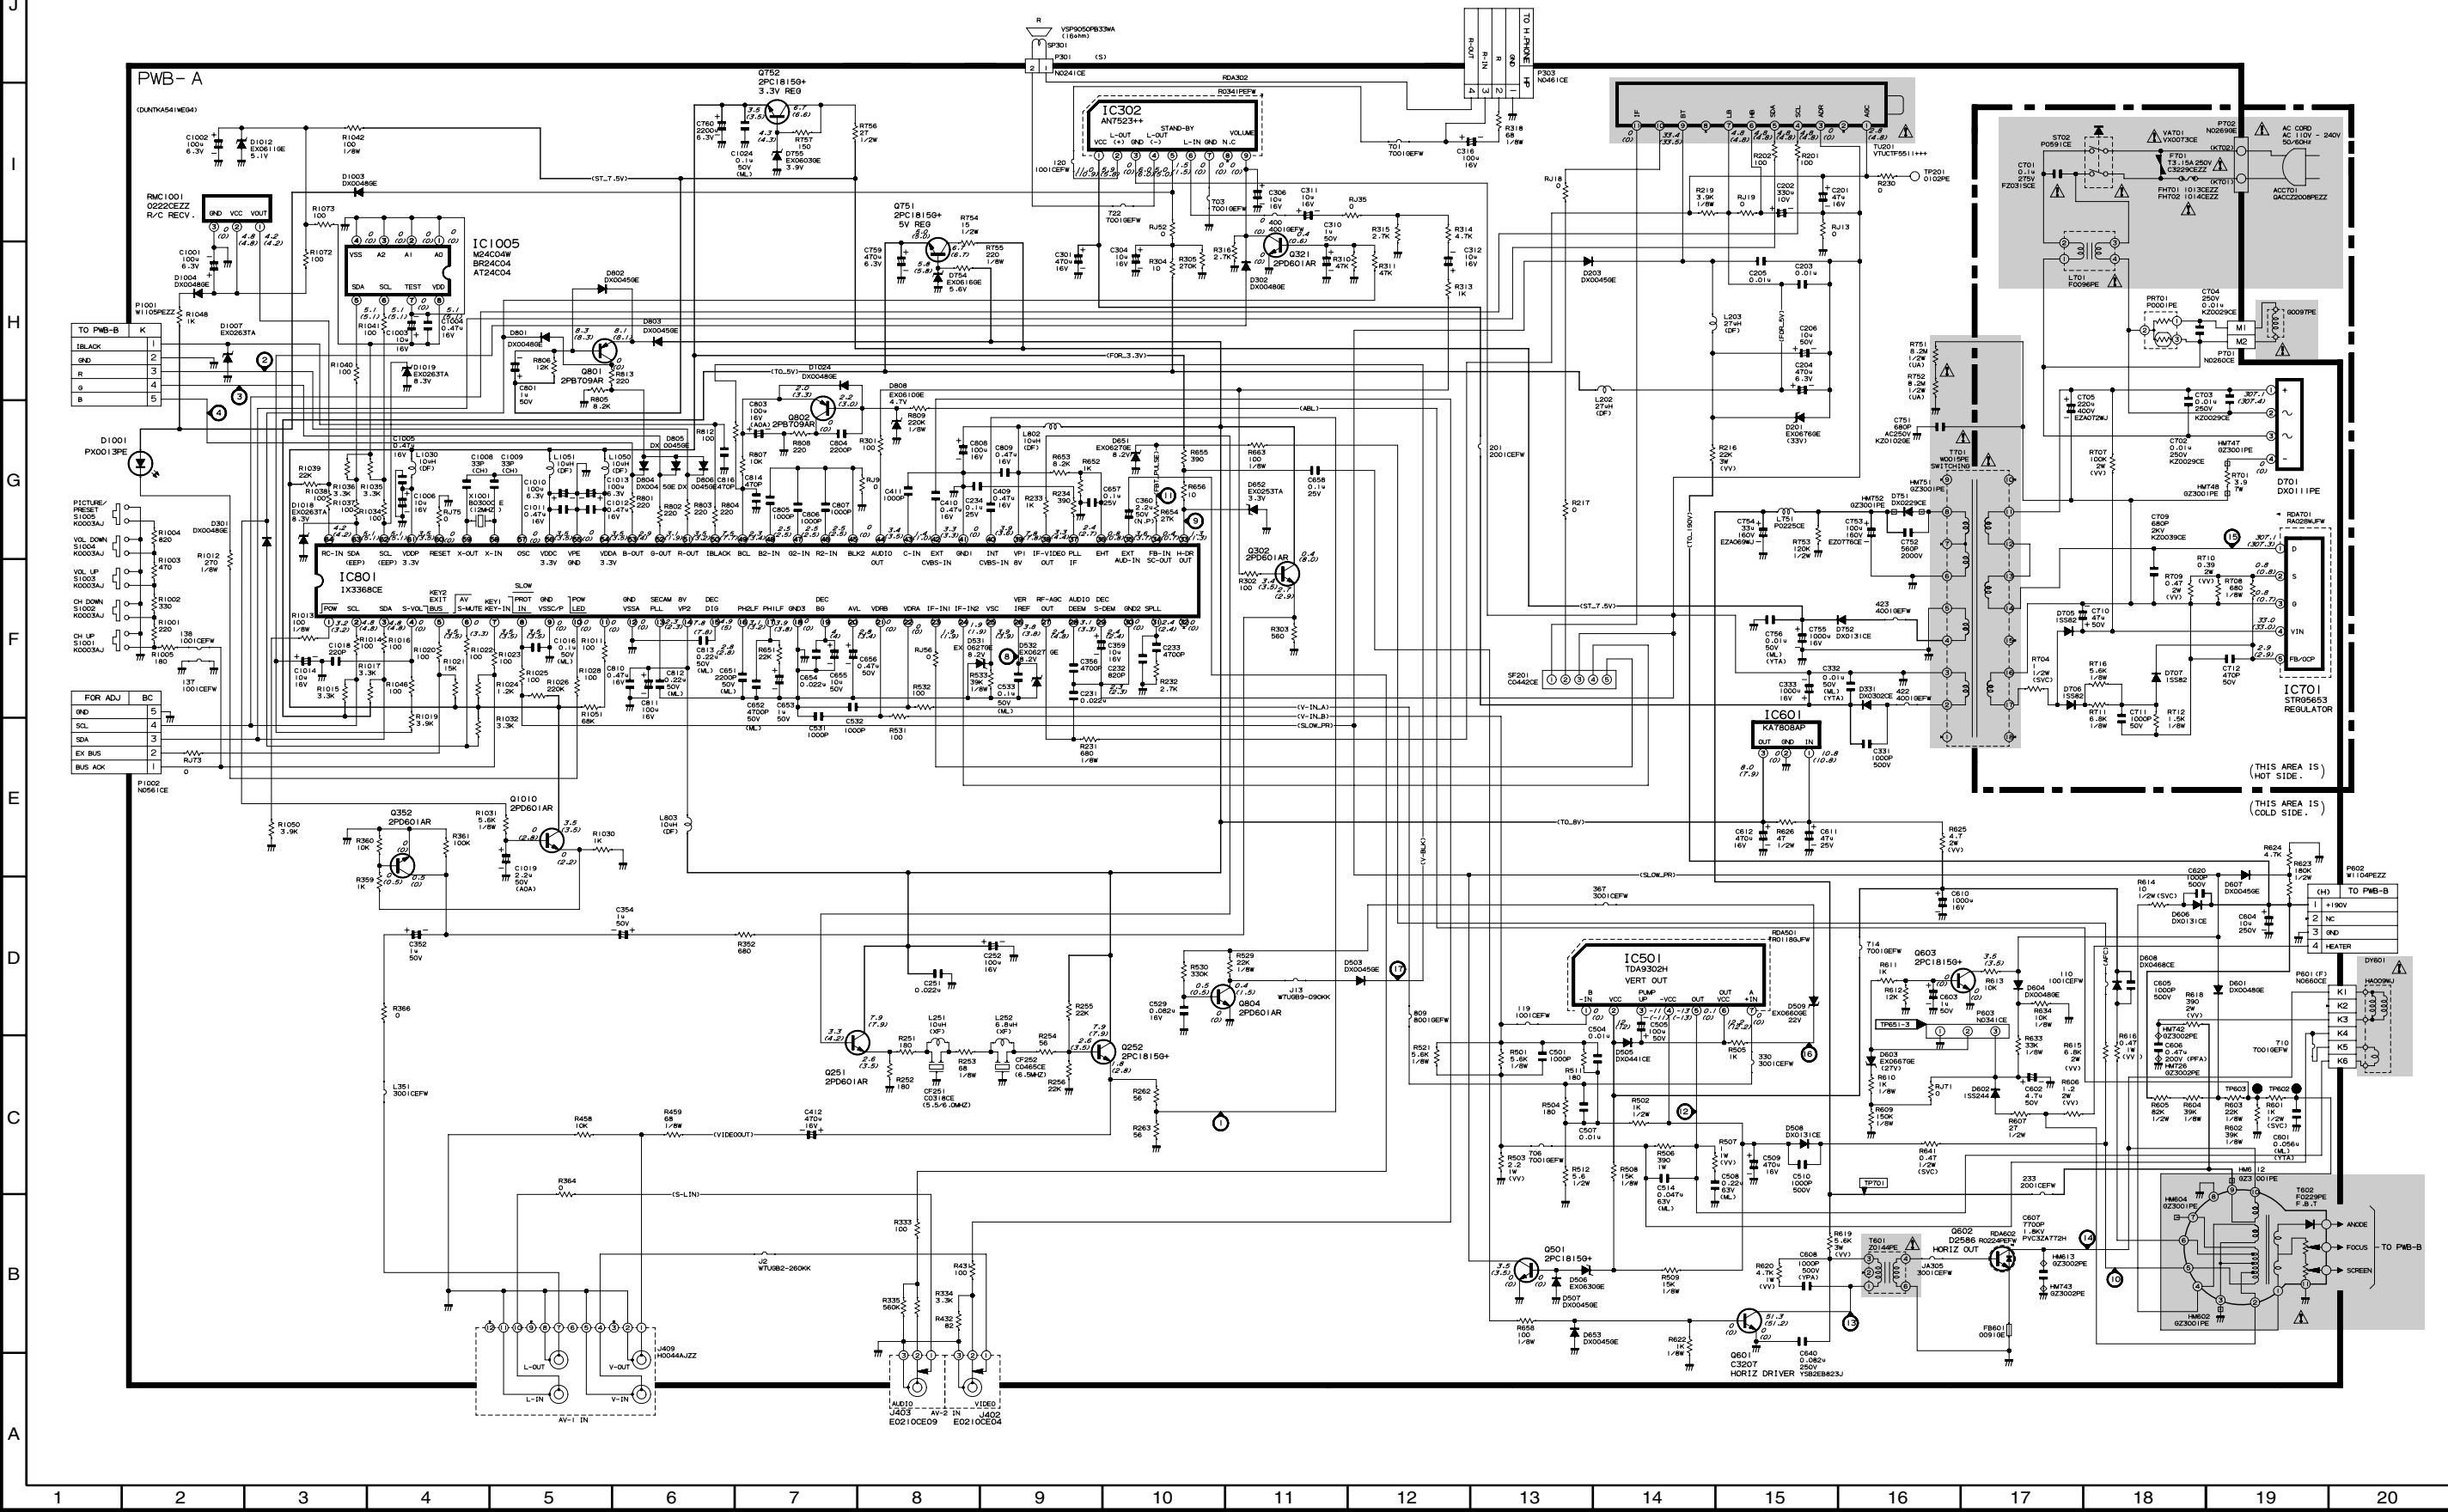


J
I
H
G
F
E
D
C
B
A



PRINTED WIRING BOARD ASSEMBLIES

PWB-A: MAIN UNIT (Component Side)

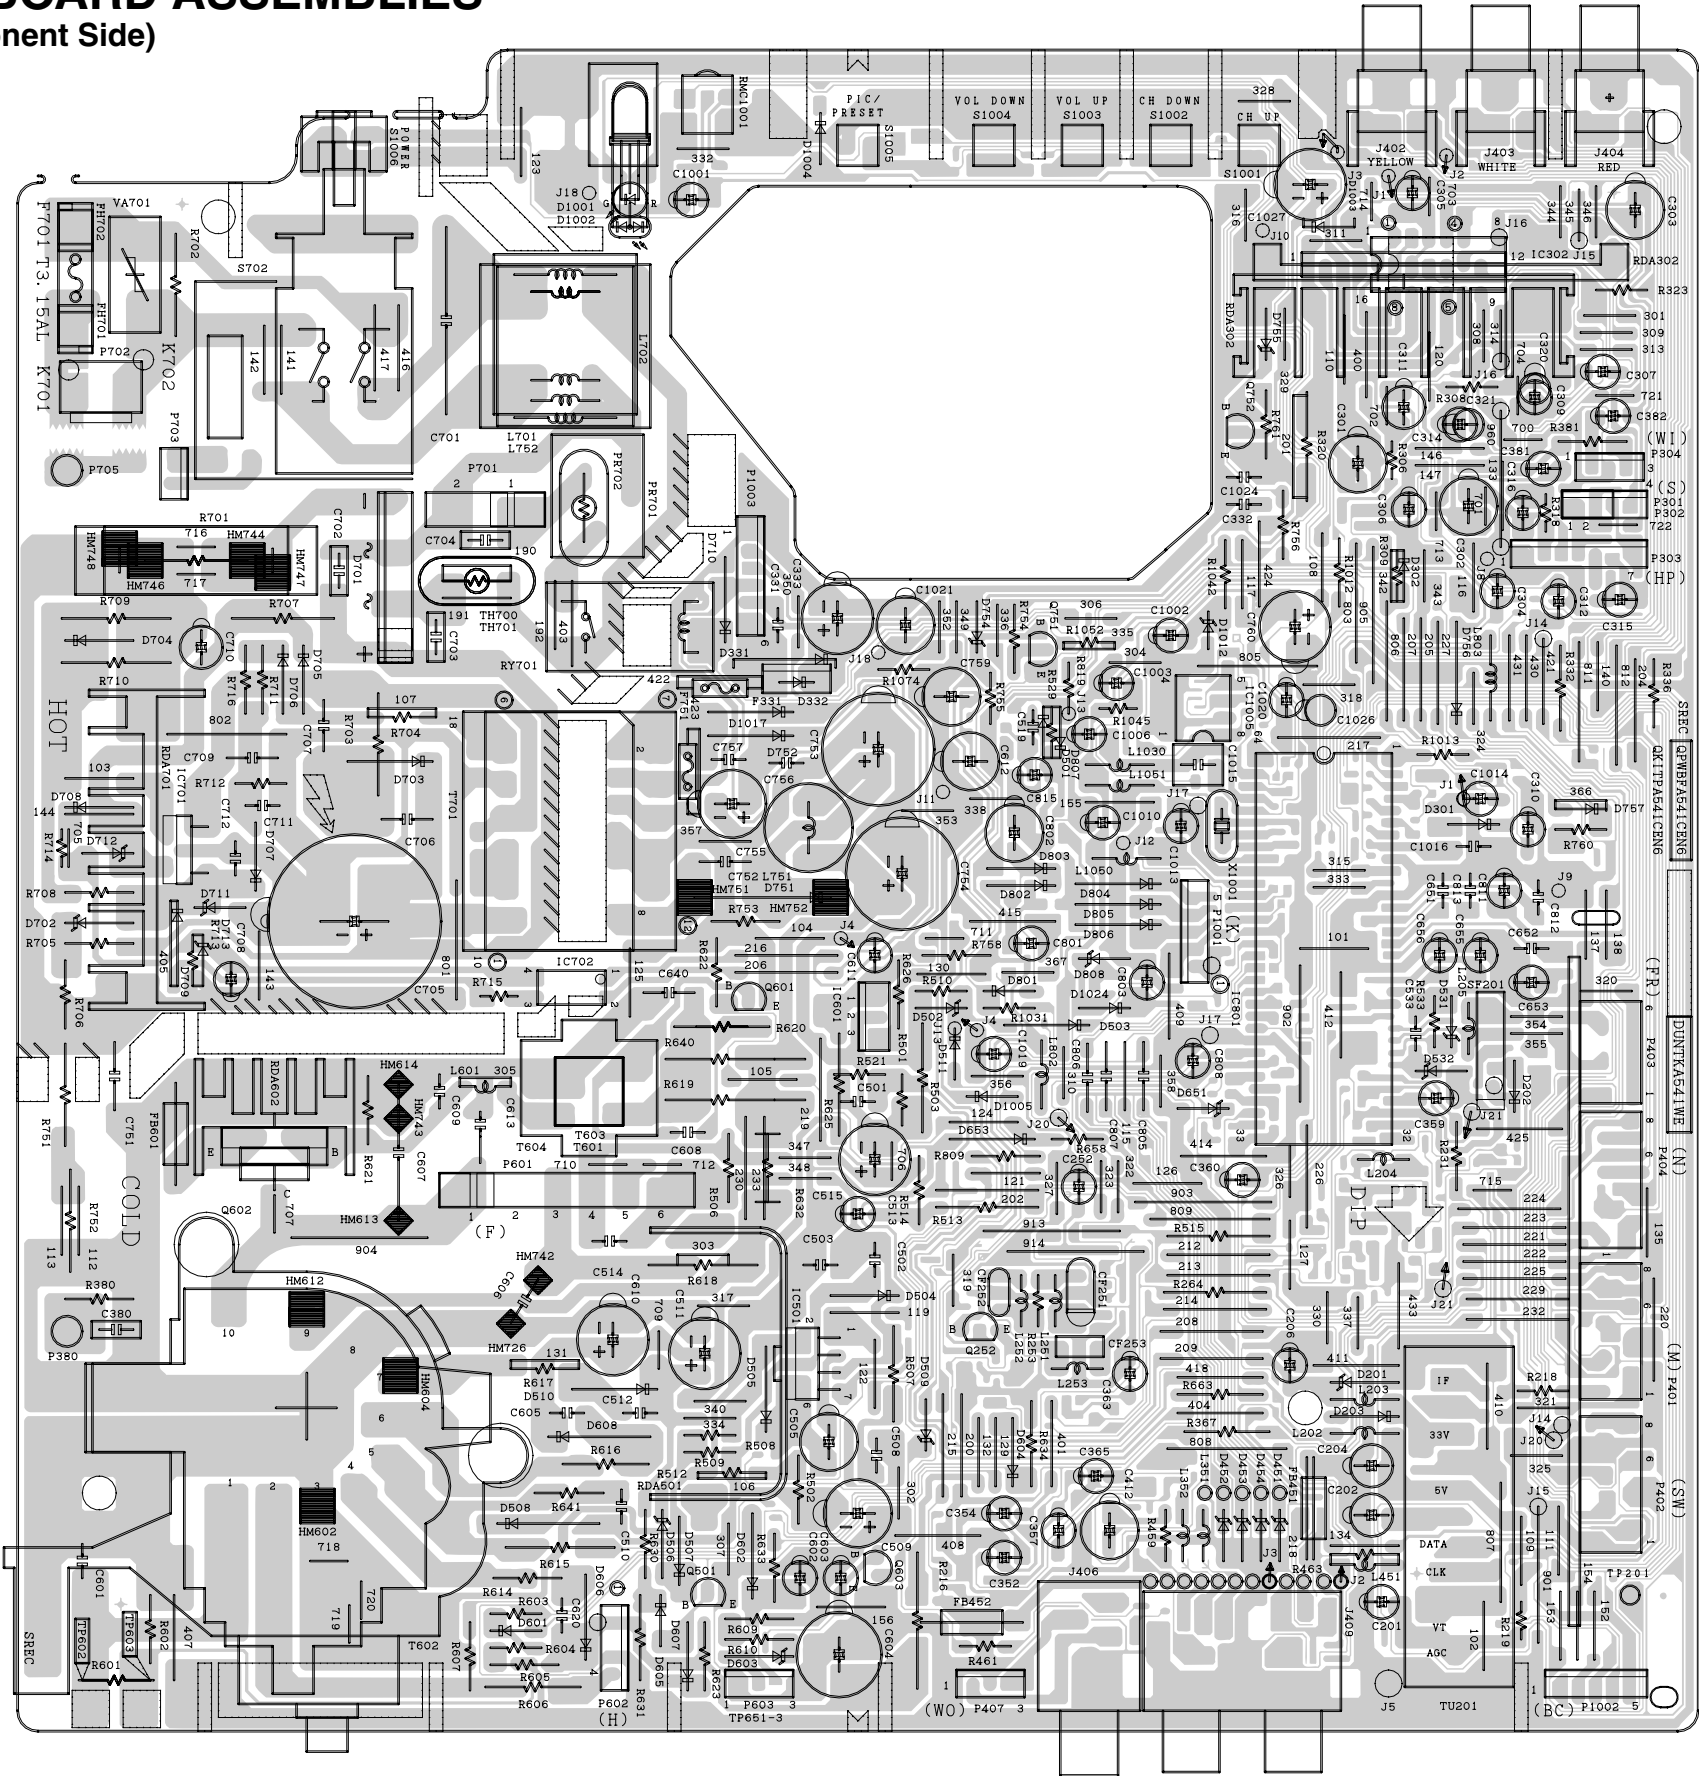

[illegible]



REPLACEMENT PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "△" in the Replacement Parts Lists.

The use of a substitute replacement part which does not have the same safety characteristics as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

1. MODEL NUMBER
2. REF. NO.
3. PART NO.
4. DESCRIPTION

MARK ★ : SPARE PARTS-DELIVERY SECTION.

Ref. No.	Part No.	★	Description	Code
PICTURE TUBE				
	RCiLG0069PEZZ	R	Degaussing Coil	AR
			(21D1-S/G, 21D2-S/G)	
L703	RCiLG0096PEZZ	R	Degaussing Coil	AD
			(20D2-S/G)	
△ DY601	RCiLHA008WJZZ	R	Deflection Yoke	AX
			(20D2-S/G)	
△ DY601	RCiLHA009WJZZ	R	Deflection Yoke	BB
			(21D1-S/G, 21D2-S/G)	
	MSPRT0001PEFJ	R	Spring	AC
	LHLDW0003PEKZ	R	Holder	AB
	PMAGF3045CEZZ	R	P-Magnet (20D2-S/G)	AG
	PMAGF3046CEZZ	R	P-Magnet	AF
			(21D1-S/G, 21D2-S/G)	
△	VB48LRH93X/*S	R	Picture Tube (20D2-S/G)	CC
△	VB51JSY63X/*S	R	Picture Tube	CE
			(21D1-S/G, 21D2-S/G)	
	QEARC2017PEZZ	R	Ground-Part (20D2-S/G)	AE
	QEARC2107PEZZ	R	Ground-Part	AE
			(21D1-S/G, 21D2-S/G)	

PRINTED WIRING BOARD ASSEMBLIES (NOT REPLACEMENT ITEM)

DUNTKA541WEG1	- Main Unit (21D2-S/G)	—
DUNTKA541WEG2	- Main Unit (20D2-S/G)	—
DUNTKA541WEG4	- Main Unit (21D1-S/G)	—
DUNTKA542WEC6	- CRT Unit	—
	(21D1-S/G, 21D2-S/G)	
DUNTKA542WEC7	- CRT Unit (20D2-S/G)	—
DUNTKA543WEA3	- Headphone Jack Unit	—

DUNTKA541WEG1/G2/G4 MAIN UNIT

TUNER

NOTE: THE PARTS HERES SHOWN ARE SUPPLIED AS AN ASSEMBLY NOT INDEPENDENTLY

△ TU201	VTUCTF5511+++	R Tuner	AZ
---------	---------------	---------	----

INTEGRATED CIRCUITS

IC302	VHiAN7523+++1	R AN7523	AH
IC501	VHiTDA9302H-1	R TDA9302H	AH
IC601	VHiKA7808AP-1	R KiA7808APi	AE
IC701	VHiSTRG5653-1	R STR-G5653	AQ

Ref. No.	Part No.	★	Description	Code
IC801	RH-iX3368CEN6	R	IX3368CE	BE
IC1005	VHiM24C04W/-1	R	M24C04-WBN6	AG

TRANSISTORS

Q251	VS2PD601AR/-1Y	R	2PD601AR	AB
Q252	VS2PC1815G+-1+	R	2PC1815G	AC
Q302	VS2PD601AR/-1Y	R	2PD601AR	AB
Q321	VS2PD601AR/-1Y	R	2PD601AR	AB
Q352	VS2PD601AR/-1Y	R	2PD601AR	AB
Q501	VS2PC1815G+-1+	R	2PC1815G	AC
Q601	VS2SC3207//1+	R	2SC3207	AC
Q602	VS2SD2586//1E	R	2SD2586	AM
Q603	VS2PC1815G+-1+	R	2PC1815G	AC
Q751	VS2PC1815G+-1+	R	2PC1815G	AC
Q752	VS2PC1815G+-1+	R	2PC1815G	AC
Q801	VS2PB709AR/-1Y	R	2PB709AR	AB
Q802	VS2PB709AR/-1Y	R	2PB709AR	AB
Q804	VS2PD601AR/-1Y	R	2PD601AR	AB
Q1010	VS2PD601AR/-1Y	R	2PD601AR	AB

DIODES

D201	RH-EX0676GEZZY	R	Zener Diode 33V	AA
D203	RH-DX0045GEZZY	R	DX0045GE	AA
D301	RH-DX0048GEZZY	R	DX0048GE	AA
D302	RH-DX0048GEZZY	R	DX0048GE	AA
D331	RH-DX0302CEZZY	R	DX0302CE (21D1-S/G)	AC
D332	RH-DX0445CEZZ	R	DX0445CE	AL
			(20D2-S/G, 21D2-S/G)	
D503	RH-DX0045GEZZY	R	DX0045GE	AA
D505	RH-DX0441CEZZY	R	DX0441CE	AC
D506	RH-EX0630GEZZY	R	Zener Diode	AA
D507	RH-DX0045GEZZY	R	DX0045GE	AA
D508	RH-DX0131CEZZY	R	DX0131CE	AC
D509	RH-EX0660GEZZY	R	Zener Diode 22V	AB
D531	RH-EX0627GEZZY	R	Zener Diode 8.2V	AA
D532	RH-EX0627GEZZY	R	Zener Diode 8.2V	AA
D601	RH-DX0048GEZZY	R	DX0048GE	AA
D602	VHD1SS244//1Y	R	1SS244	AB
D603	RH-EX0667GEZZY	R	Zener Diode 27V	AA
D604	RH-DX0048GEZZY	R	DX0048GE	AA
D606	RH-DX0131CEZZY	R	DX0131CE	AC
D607	RH-DX0045GEZZY	R	DX0045GE	AA
D608	RH-DX0468CEZZ	R	DX0468CE	AE
D651	RH-EX0627GEZZY	R	Zener Diode 8.2V	AA
D652	RH-EX0253TAZZY	R	Zener Diode 3.3V	AC
D653	RH-DX0045GEZZY	R	DX0045GE	AA
D701	RH-DX0111PEZZ	R	DX0111PE	AG
D705	VHD1SS82///1AY	R	1SS82	AC
D706	VHD1SS82///1AY	R	1SS82	AC
D707	VHD1SS82///1AY	R	1SS82	AC
D751	RH-DX0229CEZZ	R	DX0229CE	AF
D752	RH-DX0131CEZZY	R	DX0131CE	AC
D754	RH-EX0616GEZZY	R	Zener Diode 5.6V	AA
D755	RH-EX0603GEZZY	R	Zener Diode	AA
D801	RH-DX0048GEZZY	R	DX0048GE	AA
D802	RH-DX0045GEZZY	R	DX0045GE	AA
D803	RH-DX0045GEZZY	R	DX0045GE	AA
D804	RH-DX0045GEZZY	R	DX0045GE	AA
D805	RH-DX0045GEZZY	R	DX0045GE	AA
D806	RH-DX0045GEZZY	R	DX0045GE	AA
D808	RH-EX0610GEZZY	R	Zener Diode 4.7V	AA
D1001	RH-PX0013PEZZ	R	Photodiode	AC
D1003	RH-DX0048GEZZY	R	DX0048GE	AA
D1004	RH-DX0048GEZZY	R	DX0048GE	AA
D1007	RH-EX0263TAZZY	R	Zener Diode	AC
D1012	RH-EX0611GEZZY	R	Zener Diode 5.1V	AA
D1018	RH-EX0263TAZZY	R	Zener Diode 8.3V	AC
D1019	RH-EX0263TAZZY	R	Zener Diode 8.3V	AC
D1024	RH-DX0048GEZZY	R	DX0048GE	AA
△ VA701	RH-VX0073CEZZ	R	Varistor	AD

PACKAGED CIRCUITS

PR701	RMPTP0001PEZZ	R	Packaged Circuit	AN
X1001	RCRSB0300CEZZ	R	Crystal	AF

Ref. No.	Part No.	★	Description	Code
FILTERS				
CF251	RFILC0318CEZZ	R	Filter, FiLC0318CE	AG
CF252	RFILC0465CEZZ	R	Filter, FiLC0465CE	AD
SF201	RFILC0442CEZZ	R	Filter, FiLC0442CE	AL
COILS				
L202	VP-DF270K0000Y	R	Peaking 27μH	AB
L203	VP-DF270K0000Y	R	Peaking 27μH	AB
L251	VP-XF100K0000Y	R	Peaking 10μH	AB
L252	VP-XF6R8K0000Y	R	Peaking 6.8μH	AB
△ L701	RCiLF0096PEZZ	R	Coil, CiLF0096PE	AF
L751	RCiLP0225CEZZ	R	Coil, CiLP0225CE	AF
L802	VP-DF100K0000Y	R	Peaking 10μH	AB
L803	VP-DF100K0000Y	R	Peaking 10μH	AB
L1030	VP-DF100K0000Y	R	Peaking 10μH	AB
L1050	VP-DF100K0000Y	R	Peaking 10μH	AB
L1051	VP-DF100K0000Y	R	Peaking 10μH	AB
TRANSFORMERS				
△ T601	RTRNZ0144PEZZ	R	Transformer	AE
△ T602	RTRNF0229PEZZ	R	H-Volt Transformer	AY
△ T701	RTRNW0015PEZZ	R	Transformer	AL
CAPACITORS				
C201	VCEA0A1CW476M+	R 47	16V Electrolytic	AB
C202	VCEA0A1AW337M+	R 330	10V Electrolytic	AC
C203	VCKYCY1HF103Z	R 0.01	50V Ceramic	AA
C204	VCEA0A0JW477M+	R 470	6.3V Electrolytic	AC
C205	VCKYCY1HF103Z	R 0.01	50V Ceramic	AA
C206	VCEA0A1HW106M+	R 10	50V Electrolytic	AB
C231	VCKYCY1HF223Z	R 0.022	50V Ceramic	AB
C232	VCKYCY1HB821K	R 820p	50V Ceramic	AA
C233	VCKYCY1HB472K	R 4700p	50V Ceramic	AA
C234	VCKYCY1EF104Z	R 0.1	25V Ceramic	AA
C251	VCKYCY1HF223Z	R 0.022	50V Ceramic	AB
C252	VCEA0A1CW107M+	R 100	16V Electrolytic	AC
C301	VCEA0A1CW477M+	R 470	16V Electrolytic	AC
C304	VCEA0A1CW106M+	R 10	16V Electrolytic	AB
C306	VCEA0A1CW106M+	R 10	16V Electrolytic	AB
C310	VCEA0A1HW105M+	R 1	50V Electrolytic	AB
C311	VCEA0A1CW106M+	R 10	16V Electrolytic	AB
C312	VCEA0A1CW106M+	R 10	16V Electrolytic	AB
C316	VCEA0A1CW107M+	R 100	16V Electrolytic	AC
C331	VCKYPA2HB102K+	R 1000p	500V Ceramic	AA
C332	VCQYTA1HM103J+	R 0.01	50V Mylar	AB
C333	VCEA0A1CW108M+	R 1000	16V Electrolytic	AD
C352	VCEA0A1CW106M+	R 10	16V Electrolytic	AB
C352	VCE0A1HW105M+	R 1	50V Electrolytic (21D1-S/G)	AB
C354	VCEA0A1CW106M+	R 10	16V Electrolytic (20D2-S)	AB
C354	VCE0A1HW105M+	R 1	50V Electrolytic (21D1-S/G)	AB
C356	VCKYCY1HB472K	R 4700p	50V Ceramic	AA
C359	VCEA0A1CW106M+	R 10	16V Electrolytic	AB
C360	VCE9GA1HW225M+	R 2.2	50V Electrolytic (N.P)	AB
C409	VCKYCY1CF474Z	R 0.47	16V Ceramic	AB
C410	VCKYCY1CF474Z	R 0.47	16V Ceramic	AB
C411	VCKYCY1HB102K	R 1000p	50V Ceramic	AA
C412	VCEA0A1CW477M+	R 470	16V Electrolytic	AC
C501	VCKYPA1HB102K+	R 1000p	50V Ceramic	AA
C504	VCKYCY1HB103K	R 0.01	50V Ceramic	AA
C505	VCEA0A1HW107M+	R 100	50V Electrolytic	AB
C507	VCKYCY1HB103K	R 0.01	50V Ceramic	AA
C508	VCFYSA1JB224J+	R 0.22	63V Mylar	AD
C509	VCEA0A1CW477M+	R 470	16V Electrolytic	AC
C510	VCKYPA2HB102K+	R 1000p	500V Ceramic	AA
C514	VCFYSA1JB473J+	R 0.047	63V Mylar	AC
C529	VCKYCY1CB823KY	R 0.082	16V Ceramic	AH
C531	VCKYCY1HB102K	R 1000p	50V Ceramic	AA
C532	VCKYCY1HB102K	R 1000p	50V Ceramic	AA
C533	VCQYTA1HM104J+	R 0.1	50V Mylar	AB
C601	VCQYTA1HM563J+	R 0.056	50V Mylar	AB
C602	VCEA0A1HW475M+	R 4.7	50V Electrolytic	AB

Ref. No.	Part No.	★	Description	Code
C603	VCEA0A1HW105M+	R 1	50V Electrolytic	AB
C604	VCEA0A2EW106M	R 10	250V Electrolytic	AD
C605	VCKYPA2HB102K+	R 1000p	500V Ceramic	AA
C606	VCFPVC2DB474J	R 0.47	200V Metalized Polypro Film	AE
C607	VCFPVC3ZA772H	R 7700p	1800V Metalized Polypro Film	AD
C608	VCKYPA2HB102K+	R 1000p	500V Ceramic	AA
C610	VCEA0A1CW108M	R 1000	16V Electrolytic	AD
C611	VCEA0A1EW476M+	R 47	25V Electrolytic	AB
C612	VCEA0A1CW477M+	R 470	16V Electrolytic	AC
C620	VCKYPA2HB102K+	R 1000p	500V Ceramic	AA
C640	VCFYSB2EB823J	R 0.082	250V Metalized Polypro Film	AD
C651	VCQYTA1HM222J+	R 2200p	50V Mylar	AA
C652	VCQYTA1HM472J+	R 4700p	50V Mylar	AB
C653	VCEA0A1HW105M+	R 1	50V Electrolytic	AB
C654	VCKYCY1HF223Z	R 0.022	50V Ceramic	AB
C655	VCEA0A1HW106M+	R 10	50V Electrolytic	AB
C656	VCEA0A1HW474M+	R 0.47	50V Electrolytic	AB
C657	VCKYCY1EF104Z	R 0.1	25V Ceramic	AA
C658	VCKYCY1EF104Z	R 0.1	25V Ceramic	AA
C701	RC-FZ031SCEZZ	R 0.1	275V Metalized Polypro Film	AD
C702	RC-KZ0029CEZZ+	R 0.01	250V Ceramic	AC
C703	RC-KZ0029CEZZ+	R 0.01	250V Ceramic	AC
C704	RC-KZ0029CEZZ+	R 0.01	250V Ceramic	AC
C705	RC-EZA072WJZZ	R 220	400V Electrolytic	AN
C709	RC-KZ0039CEZZ	R 680p	2kV Ceramic	AB
C710	VCEA0A1HW476M+	R 47	50V Electrolytic	AB
C711	VCKYPA1HB102K+	R 1000p	50V Ceramic	AA
C712	VCKYPA1HB471K+	R 470p	50V Ceramic	AA
△ C751	RC-KZ0102GEZZ	R 680p	AC250V Ceramic	AE
C752	VCKYPH3DB561K	R 560p	2000V Ceramic	AC
C753	RC-EZ0776CEZZ	R 100	160V Electrolytic	AF
C754	RC-EZA069WJZZ	R 33	160V Electrolytic	AE
C755	VCEA0A1CW108M	R 1000	16V Electrolytic	AD
C756	VCQYTA1HM103J+	R 0.01	50V Mylar	AB
C759	VCEA0A0JW477M+	R 470	6.3V Electrolytic	AC
C760	VCEA0A0JW228M	R 2200	6.3V Electrolytic	AD
C801	VCEA0A1HW105M+	R 1	50V Electrolytic	AB
C803	VCEA0A1CW107M+	R 100	16V Electrolytic	AC
C804	VCKYCY1HB222K	R 2200p	50V Ceramic	AA
C805	VCKYD41HB102KY	R 1000p	50V Ceramic	AA
C806	VCKYD41HB102KY	R 1000p	50V Ceramic	AA
C807	VCKYD41HB102KY	R 1000p	50V Ceramic	AA
C808	VCEA0A1CW107M+	R 100	16V Electrolytic	AC
C809	VCKYCY1CF474Z	R 0.47	16V Ceramic	AB
C810	VCKYCY1CF474Z	R 0.47	16V Ceramic	AB
C811	VCEA0A1CW107M+	R 100	16V Electrolytic	AC
C812	VCFYFA1HA224J+	R 0.22	50V Mylar	AB
C813	VCFYFA1HA224J+	R 0.22	50V Mylar	AB
C814	VCKYCY1HB471K	R 470p	50V Ceramic	AA
C816	VCKYCY1HB471K	R 470p	50V Ceramic	AA
C1001	VCEA0A0JW107M+	R 100	6.3V Electrolytic	AB
C1002	VCEA0A0JW107M+	R 100	6.3V Electrolytic	AB
C1003	VCEA0A1CW106M+	R 10	16V Electrolytic	AB
C1004	VCKYCY1CF474Z	R 0.47	16V Ceramic	AB
C1005	VCKYCY1CF474Z	R 0.47	16V Ceramic	AB
C1006	VCEA0A1CW106M+	R 10	16V Electrolytic	AB
C1008	VCCCCY1HH330J	R 33p	50V Ceramic	AA
C1009	VCCCCY1HH330J	R 33p	50V Ceramic	AA
C1010	VCEA0A0JW107M+	R 100	6.3V Electrolytic	AB
C1011	VCKYCY1CF474Z	R 0.47	16V Ceramic	AB
C1012	VCKYCY1CF474Z	R 0.47	16V Ceramic	AB
C1013	VCEA0A0JW107M+	R 100	6.3V Electrolytic	AB
C1014	VCEA0A1CW106M+	R 10	16V Electrolytic	AB
C1016	VCQYTA1HM104J+	R 0.1	50V Mylar	AB
C1018	VCKYCY1HB221K	R 220p	50V Ceramic	AA
C1019	VCEA0A1HW225M+	R 2.2	50V Electrolytic	AB
C1024	VCQYTA1HM104J+	R 0.1	50V Mylar	AB
RESISTORS				
RJ2	VRN-MD2AL000J	R 0	1/10W Metal Film	AA
RJ9	VRN-MD2AL000J	R 0	1/10W Metal Film	AA
RJ10	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
RJ13	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R364	VRN-MD2AL000J	R 0	1/10W Metal Film	AA
RJ14	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R366	VRN-MD2AL000J	R 0	1/10W Metal Film	AA
RJ15	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R431	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
RJ16	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R432	VRN-MD2AL820J	R 82	1/10W Metal Film	AA
RJ17	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R458	VRN-MD2AL103J	R 10k	1/10W Metal Film	AA
RJ18	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R459	VRD-RA2BE680JY	R 68	1/8W Carbon	AA
RJ19	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R501	VRD-RA2BE222JY	R 2.2k	1/8W Carbon	AA
RJ21	VRN-MD2AL000J	R 0	1/10W Metal Film	AA				(20D2-S)	
RJ24	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R501	VRD-RA2BE562JY	R 5.6k	1/8W Carbon	AA
			(20D2-S/G, 21D2-S/G)					(21D1-S/G, 21D2-S/G)	
RJ26	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R502	VRD-RM2HD102JY	R 1k	1/2W Carbon	AA
RJ28	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R503	VRN-VV3AB2R2J	R 2.2	1W Metal Film	AA
RJ32	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R504	VRN-MD2AL181J	R 180	1/10W Metal Film	AA
RJ33	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R505	VRN-MD2AL102J	R 1k	1/10W Metal Film	AA
			(20D2-S/G, 21D2-S/G)		R506	VRS-VV3AB391J	R 390	1W Metal Oxide	AA
RJ35	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R507	VRN-VV3AB1R0J	R 1	1W Metal Film	AA
RJ37	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R508	VRD-RA2BE153JY	R 15k	1/8W Carbon	AA
RJ38	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R509	VRD-RA2BE153JY	R 15k	1/8W Carbon	AA
RJ41	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R511	VRN-MD2AL181J	R 180	1/10W Metal Film	AA
RJ42	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R512	VRD-RM2HD100JY	R 10	1/2W Carbon	AA
RJ43	VRN-MD2AL000J	R 0	1/10W Metal Film	AA				(20D2-S)	
RJ46	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R512	VRD-RM2HD5R6JY	R 5.6	1/2W Carbon	AA
RJ47	VRN-MD2AL000J	R 0	1/10W Metal Film	AA				(21D1-S/G, 21D2-S/G)	
RJ49	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R521	VRD-RA2BE562JY	R 5.6k	1/8W Carbon	AA
RJ50	VRN-MD2AL000J	R 0	1/10W Metal Film	AA				(21D1-S/G, 21D2-S/G)	
RJ51	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R529	VRD-RA2BE223JY	R 22k	1/8W Carbon	AA
RJ52	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R530	VRS-CY1JF334JY	R 330k	1/16W Metal Oxide	AA
RJ53	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R531	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
RJ56	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R532	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
RJ71	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R533	VRD-RA2BE393JY	R 39k	1/8W Carbon	AA
RJ73	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R601	VRS-SV2HC102J	R 1k	1/2W Metal Oxide	AA
RJ75	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R602	VRD-RA2BE393JY	R 39k	1/8W Carbon	AA
RJ76	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R603	VRD-RA2BE223JY	R 22k	1/8W Carbon	AA
RJ77	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R604	VRD-RA2BE393JY	R 39k	1/8W Carbon	AA
RJ78	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R605	VRD-RM2HD823JY	R 82k	1/2W Carbon	AA
RJ83	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R606	VRN-VV3DB1R2J	R 1.2	2W Metal Film	AA
RJ88	VRN-MD2AL000J	R 0	1/10W Metal Film	AA				(21D1-S/G, 21D2-S/G)	
R201	VRN-MD2AL101J	R 100	1/10W Metal Film	AA	R606	VRN-VV3AB2R2J	R 2.2	1W Metal Film	AA
R202	VRN-MD2AL101J	R 100	1/10W Metal Film	AA				(20D2-S)	
R216	VRS-VV3LB223J	R 22k	3.0W Metal Oxide	AB	R607	VRD-RM2HD270JY	R 27	1/2W Carbon	AA
R217	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R609	VRD-RA2BE154JY	R 150k	1/8W Carbon	AA
R219	VRD-RA2BE392JY	R 3.9k	1/8W Carbon	AA	R610	VRD-RA2BE102GY	R 1k	1/8W 2% Carbon	AA
R230	VRN-MD2AL000J	R 0	1/10W Metal Film	AA	R611	VRN-MD2AL102J	R 1k	1/10W Metal Film	AA
R231	VRD-RA2BE681JY	R 680	1/8W Carbon	AA	R612	VRN-MD2AL123J	R 12k	1/10W Metal Film	AA
R232	VRN-MD2AL272J	R 2.7k	1/10W Metal Film	AA	R613	VRN-MD2AL103J	R 10k	1/10W Metal Film	AA
R233	VRN-MD2AL102J	R 1k	1/10W Metal Film	AA	R614	VRS-SV2HC100J	R 10	1/2W Metal Oxide	AA
R234	VRN-MD2AL391J	R 390	1/10W Metal Film	AA	R615	VRS-VV3DB682J	R 6.8k	2W Metal Oxide	AA
R251	VRN-MD2AL181J	R 180	1/10W Metal Film	AA	R616	VRN-VV3ABR47J	R 0.47	1W Metal Film	AA
R252	VRN-MD2AL181J	R 180	1/10W Metal Film	AA				(20/21D2-G)	
R253	VRD-RA2BE680JY	R 68	1/8W Carbon	AA	R618	VRS-VV3DB391J	R 390	2W Metal Oxide	AA
R254	VRN-MD2AL560J	R 56	1/10W Metal Film	AB	R619	VRS-VV3LB562J	R 5.6k	3.0W Metal Oxide	AB
R255	VRN-MD2AL223J	R 22k	1/10W Metal Film	AA	R620	VRN-VV3AB472J	R 4.7k	1W Metal Oxide	AA
R256	VRN-MD2AL223J	R 22k	1/10W Metal Film	AA	R622	VRD-RA2BE102JY	R 1k	1/8W Carbon	AA
R262	VRN-MD2AL560J	R 56	1/10W Metal Film	AB	R623	VRD-RM2HD184JY	R 180k	1/2W Carbon	AA
R263	VRN-MD2AL560J	R 56	1/10W Metal Film	AB	R624	VRN-MD2AL472J	R 4.7k	1/10W Metal Film	AA
R301	VRN-MD2AL101J	R 100	1/10W Metal Film	AA	R625	VRN-VV3DB4R7J	R 4.7	2W Metal Film	AB
R302	VRN-MD2AL101J	R 100	1/10W Metal Film	AA	R626	VRD-RM2HD470JY	R 47	1/2W Carbon	AA
R303	VRN-MD2AL561J	R 560	1/10W Metal Film	AA	R633	VRD-RA2BE333JY	R 33k	1/8W Carbon	AA
R304	VRN-MD2AL100J	R 10	1/10W Metal Film	AA	R634	VRD-RA2BE103JY	R 10k	1/8W Carbon	AA
R305	VRN-MD2AL274J	R 270k	1/10W Metal Film	AA	R641	VRN-SV2HCR47J	R 0.47	1/2W Metal Film	AA
R310	VRN-MD2AL473J	R 47k	1/10W Metal Film	AA	R651	VRN-MD2AL223J	R 22k	1/10W Metal Film	AA
R311	VRN-MD2AL473J	R 47k	1/10W Metal Film	AA	R652	VRN-MD2AL102J	R 1k	1/10W Metal Film	AA
R313	VRN-MD2AL102J	R 1k	1/10W Metal Film	AA	R653	VRN-MD2AL822J	R 8.2k	1/10W Metal Film	AA
R314	VRN-MD2AL472J	R 4.7k	1/10W Metal Film	AA	R654	VRN-MD2AL273J	R 27k	1/10W Metal Film	AA
R315	VRN-MD2AL272J	R 2.7k	1/10W Metal Film	AA	R655	VRN-MD2AL391J	R 390	1/10W Metal Film	AA
R316	VRN-MD2AL272J	R 2.7k	1/10W Metal Film	AA	R656	VRN-MD2AL100J	R 10	1/10W Metal Film	AA
R318	VRD-RA2BE680JY	R 68	1/8W Carbon	AA	R658	VRD-RA2BE101JY	R 100	1/8W Carbon	AA
R333	VRN-MD2AL101J	R 100	1/10W Metal Film	AA	R663	VRD-RA2BE101JY	R 100	1/8W Carbon	AA
R334	VRN-MD2AL332J	R 3.3k	1/10W Metal Film	AA	R701	VRW-KQ3NC3R9K	R 3.9	7.0W 10% Cement	AE
R335	VRN-MD2AL564J	R 560k	1/10W Metal Film	AA	R704	VRN-SV2HC1R0J	R 1	1/2W Metal Film	AA
R352	VRN-MD2AL681J	R 680	1/10W Metal Film	AA	R707	VRS-VV3DB104J	R 100k	2W Metal Oxide	AB
R359	VRN-MD2AL103J	R 10k	1/10W Metal Film	AA	R708	VRD-RA2BE681JY	R 680	1/8W Carbon	AA
			(20D2-S)		R709	VRN-VV3DBR47J	R 0.47	2W Metal Film	AB
R359	VRN-MD2AL102J	R 1k	1/10W Metal Film	AA	R710	VRN-VV3DBR39J	R 0.39	2W Metal Film	AA
			(21D1-S/G)		R711	VRD-RA2BE682JY	R 6.8k	1/8W Carbon	AA
R360	VRN-MD2AL103J	R 10k	1/10W Metal Film	AA	R712	VRD-RA2BE152JY	R 1.5k	1/8W Carbon	AA
R361	VRN-MD2AL104J	R 100k	1/10W Metal Film	AA	R716	VRD-RA2BE562JY	R 5.6k	1/8W Carbon	AA

Ref. No.	Part No.	★	Description	Code
△ R751	VRC-UA2HG825KY	R 8.2M	1/2W 10% Solid	AA
△ R752	VRC-UA2HG825KY	R 8.2M	1/2W 10% Solid	AA
R753	VRD-RM2HD124JY	R 120k	1/2W Carbon	AA
R754	VRD-RM2HD150JY	R 15	1/2W Carbon	AA
R755	VRD-RA2BE221JY	R 220	1/8W Carbon	AA
R756	VRD-RM2HD270JY	R 27	1/2W Carbon	AA
R757	VRN-MD2AL151J	R 150	1/10W Metal Film	AA
R801	VRN-MD2AL221J	R 220	1/10W Metal Film	AA
R802	VRN-MD2AL221J	R 220	1/10W Metal Film	AA
R803	VRN-MD2AL221J	R 220	1/10W Metal Film	AA
R804	VRN-MD2AL221J	R 220	1/10W Metal Film	AA
R805	VRN-MD2AL822J	R 8.2k	1/10W Metal Film	AA
R806	VRN-MD2AL123J	R 12k	1/10W Metal Film	AA
R807	VRN-MD2AL103J	R 10k	1/10W Metal Film	AA
R808	VRN-MD2AL221J	R 220	1/10W Metal Film	AA
R809	VRD-RA2BE224JY	R 220k	1/8W Carbon	AA
R812	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R813	VRN-MD2AL221J	R 220	1/10W Metal Film	AA
R1001	VRN-MD2AL221J	R 220	1/10W Metal Film	AA
R1002	VRN-MD2AL331J	R 330	1/10W Metal Film	AA
R1003	VRN-MD2AL471J	R 470	1/10W Metal Film	AA
R1004	VRN-MD2AL821J	R 820	1/10W Metal Film	AA
R1005	VRN-MD2AL181J	R 180	1/10W Metal Film	AA
R1011	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1012	VRD-RA2BE271JY	R 270	1/8W Carbon	AA
R1013	VRD-RA2BE101JY	R 100	1/8W Carbon	AA
R1014	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1015	VRN-MD2AL332J	R 3.3k	1/10W Metal Film	AA
R1016	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1017	VRN-MD2AL332J	R 3.3k	1/10W Metal Film	AA
R1019	VRN-MD2AL392J	R 3.9k	1/10W Metal Film	AA
R1020	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1021	VRN-MD2AL153J	R 15k	1/10W Metal Film	AA
R1022	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1023	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1024	VRN-MD2AL122J	R 1.2k	1/10W Metal Film	AA
R1025	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1026	VRN-MD2AL224J	R 220k	1/10W Metal Film	AA
R1028	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1030	VRN-MD2AL102J	R 1k	1/10W Metal Film	AA
R1031	VRD-RA2BE562JY	R 5.6k	1/8W Carbon	AA
R1032	VRN-MD2AL332J	R 3.3k	1/10W Metal Film	AA
R1034	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1035	VRN-MD2AL332J	R 3.3k	1/10W Metal Film	AA
R1036	VRN-MD2AL332J	R 3.3k	1/10W Metal Film	AA
R1037	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1038	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1039	VRN-MD2AL223J	R 22k	1/10W Metal Film	AA
R1040	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1041	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1042	VRD-RA2BE101JY	R 100	1/8W Carbon	AA
R1046	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1048	VRS-CY1JF102JY	R 1k	1/16W Metal Oxide	AA
R1050	VRN-MD2AL392J	R 3.9k	1/10W Metal Film	AA
R1051	VRN-MD2AL683J	R 68k	1/10W Metal Film	AA
R1072	VRN-MD2AL101J	R 100	1/10W Metal Film	AA
R1073	VRN-MD2AL101J	R 100	1/10W Metal Film	AA

BALUN

FB601	RBLN-0091GEZZY	R Balun, BLN-0091GEZZ	AB
-------	----------------	-----------------------	----

SWITCHES

△ S702	QSW-P0591CEZZ	R Switch, POWER	AQ
S1001	QSW-K0003AJZZ+	R Switch, CH UP	AB
S1002	QSW-K0003AJZZ+	R Switch, CH DOWN	AB
S1003	QSW-K0003AJZZ+	R Switch, VOL UP	AB
S1004	QSW-K0003AJZZ+	R Switch, VOL DOWN	AB
S1005	QSW-K0003AJZZ+	R Switch, PICTURE RESET	AB

MISCELLANEOUS PARTS

△ ACC701	QACCZ2008PEZZ	R AC Cord	AM
△ F701	QFS-C3229CEZZ	R Fuse 3.15A/250V	AD
△ FH701	QFSDH1013CEZZ+	R Fuse Holder	AC
△ FH702	QFSDH1014CEZZ+	R Fuse Holder	AC
J402	QJAKE0210CE04	R Jack, 3Pin VIDEO-IN	AC
J403	QJAKE0210CE09	R Jack, 3Pin AUDIO-IN	AC

Ref. No.	Part No.	★	Description	Code
J409	QJAKH0044AJZZ	R	Jack, 12Pin AV-1 IN	AE
P302	QPLGN0461CEZZ	R	Plug, 4Pin (S)	AB
			(20D2-S)	
P302	QPLGN0241CEZZ	R	Plug, 4Pin (S)	AA
			(21D1-S/G)	
P303	QPLGN0461CEZZ	R	Plug, 4Pin (HP)	AB
			(21D1-S/G)	
P303	QPLGN0561CEZZ	R	Plug, 5Pin (HP)	AB
			(20D2-S)	
P601	QPLGN0660CEZZ	R	Plug, 6Pin (F)	AC
P602	LHLDW1104PEZZ	R	Holder, 4Pin (H)	AB
			(21D2-G)	
P1001	LHLDW1105PEZZ	R	Holder, 5Pin (K)	AB
			(21D2-G)	
P603	QPLGN0341CEZZ	R	Plug, 3Pin (TP651~3)	AA
P701	QPLGN0260CEZZ	R	Plug, 2Pin	AC
P702	QPLGN0269GEZZ	R	Plug, 2Pin (M)	AB
P1002	QPLGN0561CEZZ	R	Plug, 5Pin (BC)	AB
RDA302	PRDAR0340PEFW	R	Heat Sink for IC302	AE
			(20D2-S/G, 21D2-S/G)	
RDA302	PRDAR0341PEFW	R	Heat Sink for IC302	AE
			(21D1-S/G)	
RDA501	PRDAR0118GJFW	R	Heat Sink for IC501	AD
RDA602	PRDAR0224PEFW	R	Heat Sink for Q602	AF
RDA701	PRDAR0298PEFW	R	Heat Sink for IC701	AF
RMC1001	RRMCU0222CEZZ	R	Remote Receiver	AL
TP201	QLUGP0102PEZZ	R	Lug	AA
	LHLDP1066PE00	R	Holder	AC

**DUNTKA542WEC6/C7
CRT UNIT****TRANSISTORS**

Q870	RH-TX0110BMZZ+	R TX0110BM	AC
Q871	RH-TX0110BMZZ+	R TX0110BM	AC
Q872	RH-TX0110BMZZ+	R TX0110BM	AC
Q883	RH-TX0124BMZZ+	R TX0124BM	AC
Q885	RH-TX0124BMZZ+	R TX0124BM	AC
Q887	RH-TX0124BMZZ+	R TX0124BM	AC

DIODES

D881	VHD1SS244//1Y	R 1SS244	AB
D882	VHD1SS244//1Y	R 1SS244	AB
D883	VHD1SS244//1Y	R 1SS244	AB
D884	RH-DX0048GEZZY	R DX0048GE	AA
D885	RH-DX0048GEZZY	R DX0048GE	AA
D886	VHD1SS82///1AY	R 1SS82	AC
D887	VHD1SS82///1AY	R 1SS82	AC
D888	VHD1SS82///1AY	R 1SS82	AC

COIL

L881	QJUM-4001GEFWY	R JUMPER (21D2-G)	AA
------	----------------	-------------------	----

CAPACITORS

C871	VCCCCY1HH471J	R 470p 50V Ceramic	AA
C872	VCCCCY1HH471J	R 470p 50V Ceramic	AA
C873	VCCCCY1HH471J	R 470p 50V Ceramic	AA
C875	VCKYPA2HB102K+	R 1000p 500V Ceramic	AA
C876	RC-KZ0150CEZZ	R 1000p 3kV Ceramic	AB
C878	VCEA0A2EW106M+	R 10 250V Electrolytic	AD
C880	VCCCCY1HH471J	R 470p 50V Ceramic	AA
C881	VCKYPA1HB471K+	R 470p 50V Ceramic	AA
C882	VCKYPA1HB471K+	R 470p 50V Ceramic	AA
C886	VCKYPA2HB102K+	R 1000p 500V Ceramic	AA

RESISTORS

R879	VRN-MD2AL471J	R 470 1/10W Metal Film	AA
R880	VRN-MD2AL471J	R 470 1/10W Metal Film	AA
R881	VRN-MD2AL471J	R 470 1/10W Metal Film	AA
R882	VRS-VV3DB153J	R 15k 2W Metal Oxide	AA
R883	VRD-RM2HD272JY	R 2.7k 1/2W Carbon	AA
R884	VRS-VV3DB153J	R 15k 2W Metal Oxide	AA
R885	VRD-RM2HD272JY	R 2.7k 1/2W Carbon	AA
R886	VRS-VV3DB153J	R 15k 2W Metal Oxide	AA
R887	VRD-RM2HD272JY	R 2.7k 1/2W Carbon	AA

Ref. No.	Part No.	★	Description	Code
R888	VRN-MD2AL471J	R 470	1/10W Metal Film (20D2-S/G)	AA
R892	VRN-MD2AL102J	R 1k	1/10W Metal Film	AA
R893	VRN-MD2AL102J	R 1k	1/10W Metal Film	AA
R894	VRN-MD2AL102J	R 1k	1/10W Metal Film	AA
R895	VRN-MD2AL471J	R 470	1/10W Metal Film (21D1-S/G, 21D2-S/G)	AA
R896	VRN-MD2AL471J	R 470	1/10W Metal Film (21D1-S/G, 21D2-S/G)	AA
R898	VRN-MD2AL471J	R 470	1/10W Metal Film (20D2-S/G)	AA
R899	VRN-MD2AL471J	R 470	1/10W Metal Film	AA

MISCELLANEOUS PARTS

△ SC883	QSOCV0016PEZZ	R Socket, 11Pin (21D1-S/G, 21D2-S/G)	AF
SC881	QSOCVA001WJZZ	R Socket, 9Pin (20D2-S/G)	AE
P882	LHLDW1105PEZZ	R Holder (21D2-S/G)	AB
P884	LHLDW1104PEZZ	R Holder (21D2-S/G)	AB

**DUNTKA543WEA3
HEADPHONE JACK UNIT****RESISTORS**

RJ60	VRN-MD2AL000J	R 0	1/10W Metal Film	AA
RJ61	VRN-MD2AL000J	R 0	1/10W Metal Film	AA
RJ62	VRN-MD2AL000J	R 0	1/10W Metal Film	AA
R370	VRN-MD2AL471J	R 470	1/10W Metal Film	AA
R371	VRN-MD2AL471J	R 470	1/10W Metal Film	AA

MISCELLANEOUS PARTS

J351	QJAKJ0101SEZZ	R Jack, 7Pin (Headphone)	AE
P351	QPLGN0461CEZZ	R Plug, 4Pin (HP)	AB

Ref. No.	Part No.	★	Description	Code
MISCELLANEOUS PARTS				
	QCNW-2381PEZZ	R	Connecting Cord (20D2-S, 21D2-S/G)	AG
	QCNW-2452PEZZ	R	Connecting Cord (20D2-S/G, 21D2-S/G)	AE
	QCNW-A229WJZZ	R	Connecting Cord (20D2-S/G)	AD
	QCNW-A230WJZZ	R	Connecting Cord	AD
	QCNW-A720WJZZ	R	Connecting Cord (21D2-S/G)	AD
	QCNW-2206PEZZ	R	Connecting Cord (21D1-S/G)	AD
	QCNW-2379PEZZ	R	Connecting Cord (21D1-S/G)	AE
	QCNW-A500WJZZ	R	Connecting Cord (21D1-S/G)	AD

SUPPLIED ACCESSORIES**ACCESSORIES**

RRMCG1342PESA	R Infrared R-C	AU
TINS-A185WJZZ	R Instruction Book (20D2-S/G, 21D2-S/G)	AH
TiNS-A314WJZZ	R Instruction Book (21D1-S/G)	AK
TMAPCA005WJZZ	R Circuit Diagram (21D2-S/G)	AC
TMAPCA006WJZZ	R Circuit Diagram (20D2-S/G)	AC
TMAPCA010WJZZ	R Circuit Diagram (21D1-S/G)	AC

ACCESSORY(NOT REPLACEMENT ITEM)

TCAUA0002PEZZ	- Caution Card	—
---------------	----------------	---

**PACKING PARTS
(NOT REPLACEMENT ITEM)**

SPAKCA116WJZZ	- Packing Case (21D2-S)	—
SPAKCA153WJZZ	- Packing Case (21D1-S)	—
SPAKCA167WJZZ	- Packing Case (21D2-G)	—
SPAKCA195WJZZ	- Packing Case (20D2-S)	—
SPAKCA149WJZZ	- Packing Case (20D2-G)	—
SPAKCA221WJZZ	- Packing Case (21D1-G)	—
SPAKXA051WJZZ	- Packing Add (20D2-S/G, 21D2-S/G)	—
SPAKXA077WJZZ	- Packing Add (21D1-S/G)	—
SSAKA0031PEZZ	- Polyethylene Bag	—
SSAKH0016PEZZ	- Polyethylene Bag	—

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

CABINET PARTS

20D2-S

1	CCABAA084WEV0	R	Front Cabinet Ass'y	BE
1-1	Not Available	-	Front Cabinet	—
1-2	HBDGB0015PESB	R	Badge	AE
1-3	GCOVAA106WJSA	R	R/C LED Cover	AC
1-4	JBTN-A028WJSA	R	Control Button	AF
1-5	JBTN-A027WJSA	R	Power Button	AF
1-6	MSPRC0068CEFW	R	PWR BTN Spring	AA
2	CCABBA035WEV0	R	Rear Cabinet Ass'y	BA
2-1	Not Available	-	Rear Cabinet	—
3	VSP9050PB33WA	R	Speaker	AK

20D2-G

1	CCABAA109WEV0	R	Front Cabinet Ass'y	BE
1-1	Not Available	-	Front Cabinet	—
1-2	HBDGB0015PESB	R	Badge	AE
1-3	GCOVAA106WJSA	R	R/C LED Cover	AC
1-4	JBTN-A028WJSB	R	Control Button	AF
1-5	JBTN-A027WJSB	R	Power Button	AF
1-6	MSPRC0068CEFW	R	PWR BTN Spring	AA
2	CCABBA035WEV0	R	Rear Cabinet Ass'y	BA
2-1	Not Available	-	Rear Cabinet	—
3	VSP9050PB33WA	R	Speaker	AK

21D2-S

1	CCABAA065WEV0	R	Front Cabinet Ass'y	BM
1-1	Not Available	-	Front Cabinet	—
1-2	HBDGB0015PESB	R	Badge	AE
1-3	GCOVAA106WJSA	R	R/C LED Cover	AC
1-4	JBTN-A028WJSA	R	Control Button	AF
1-5	JBTN-A027WJSA	R	Power Button	AF
1-6	MSPRC0068CEFW	R	PWR BTN Spring	AA
2	CCABBA035WEV0	R	Rear Cabinet Ass'y	BA
2-1	Not Available	-	Rear Cabinet	—
3	VSP9050PB33WA	R	Speaker	AK

21D2-G

1	CCABAA108WEV0	R	Front Cabinet Ass'y	BL
1-1	Not Available	-	Front Cabinet	—
1-2	HBDGB0015PESB	R	Badge	AE
1-3	GCOVAA106WJSA	R	R/C LED Cover	AC
1-4	JBTN-A028WJSB	R	Control Button	AF
1-5	JBTN-A027WJSB	R	Power Button	AF
1-6	MSPRC0068CEFW	R	PWR BTN Spring	AA
2	CCABBA035WEV0	R	Rear Cabinet Ass'y	BA
2-1	Not Available	-	Rear Cabinet	—
3	VSP9050PB33WA	R	Speaker	AK


21D1-S

1	CCABAA087WEV0	R	Front Cabinet Ass'y	BE
1-1	Not Available	-	Front Cabinet	—
1-2	HBDGB0019PESB	R	Badge	AE
1-3	GCOVAA117WJSA	R	R/C LED Cover	AD
1-4	JBTN-A028WJSA	R	Control Button	AF
1-5	JBTN-A049WJSA	R	Power Button	AF
1-6	MSPRC0005PEFW	R	PWR BTN Spring	AA
2	CCABBA049WEV0	R	Rear Cabinet Ass'y	BA
2-1	Not Available	-	Rear Cabinet	—
3	VSP9050PB33WA	R	Speaker	AK


21D1-G

1	CCABAA120WEV0	R	Front Cabinet Ass'y	BE
1-1	Not Available	-	Front Cabinet	—
1-2	HBDGB0019PESB	R	Badge	AE
1-3	GCOVAA117WJSA	R	R/C LED Cover	AD
1-4	JBTN-A028WJSB	R	Control Button	AF
1-5	JBTN-A049WJSB	R	Power Button	AF
1-6	MSPRC0005PEFW	R	PWR BTN Spring	AA
2	CCABBA049WEV0	R	Rear Cabinet Ass'y	BA
2-1	Not Available	-	Rear Cabinet	—
3	VSP9050PB33WA	R	Speaker	AK


20D2-S/G

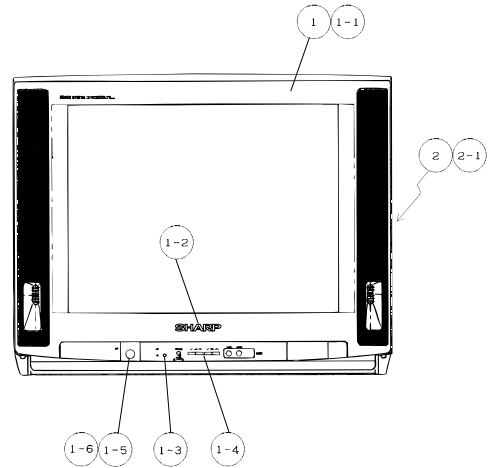


21D2-S/G

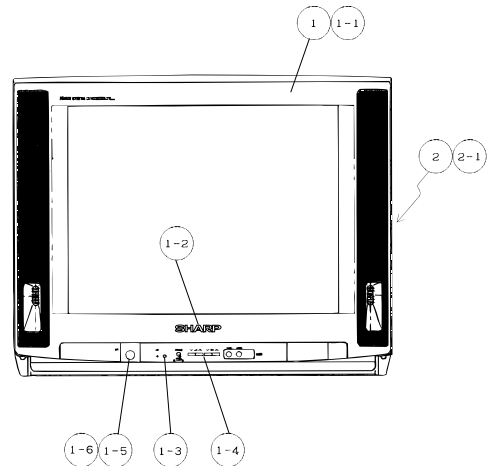

21D1-S/G

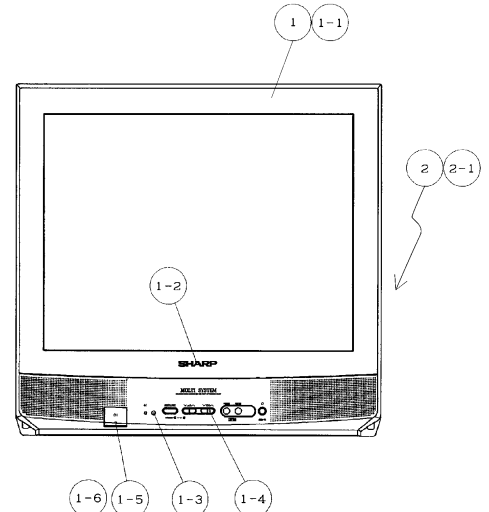

PACKING OF THE SET

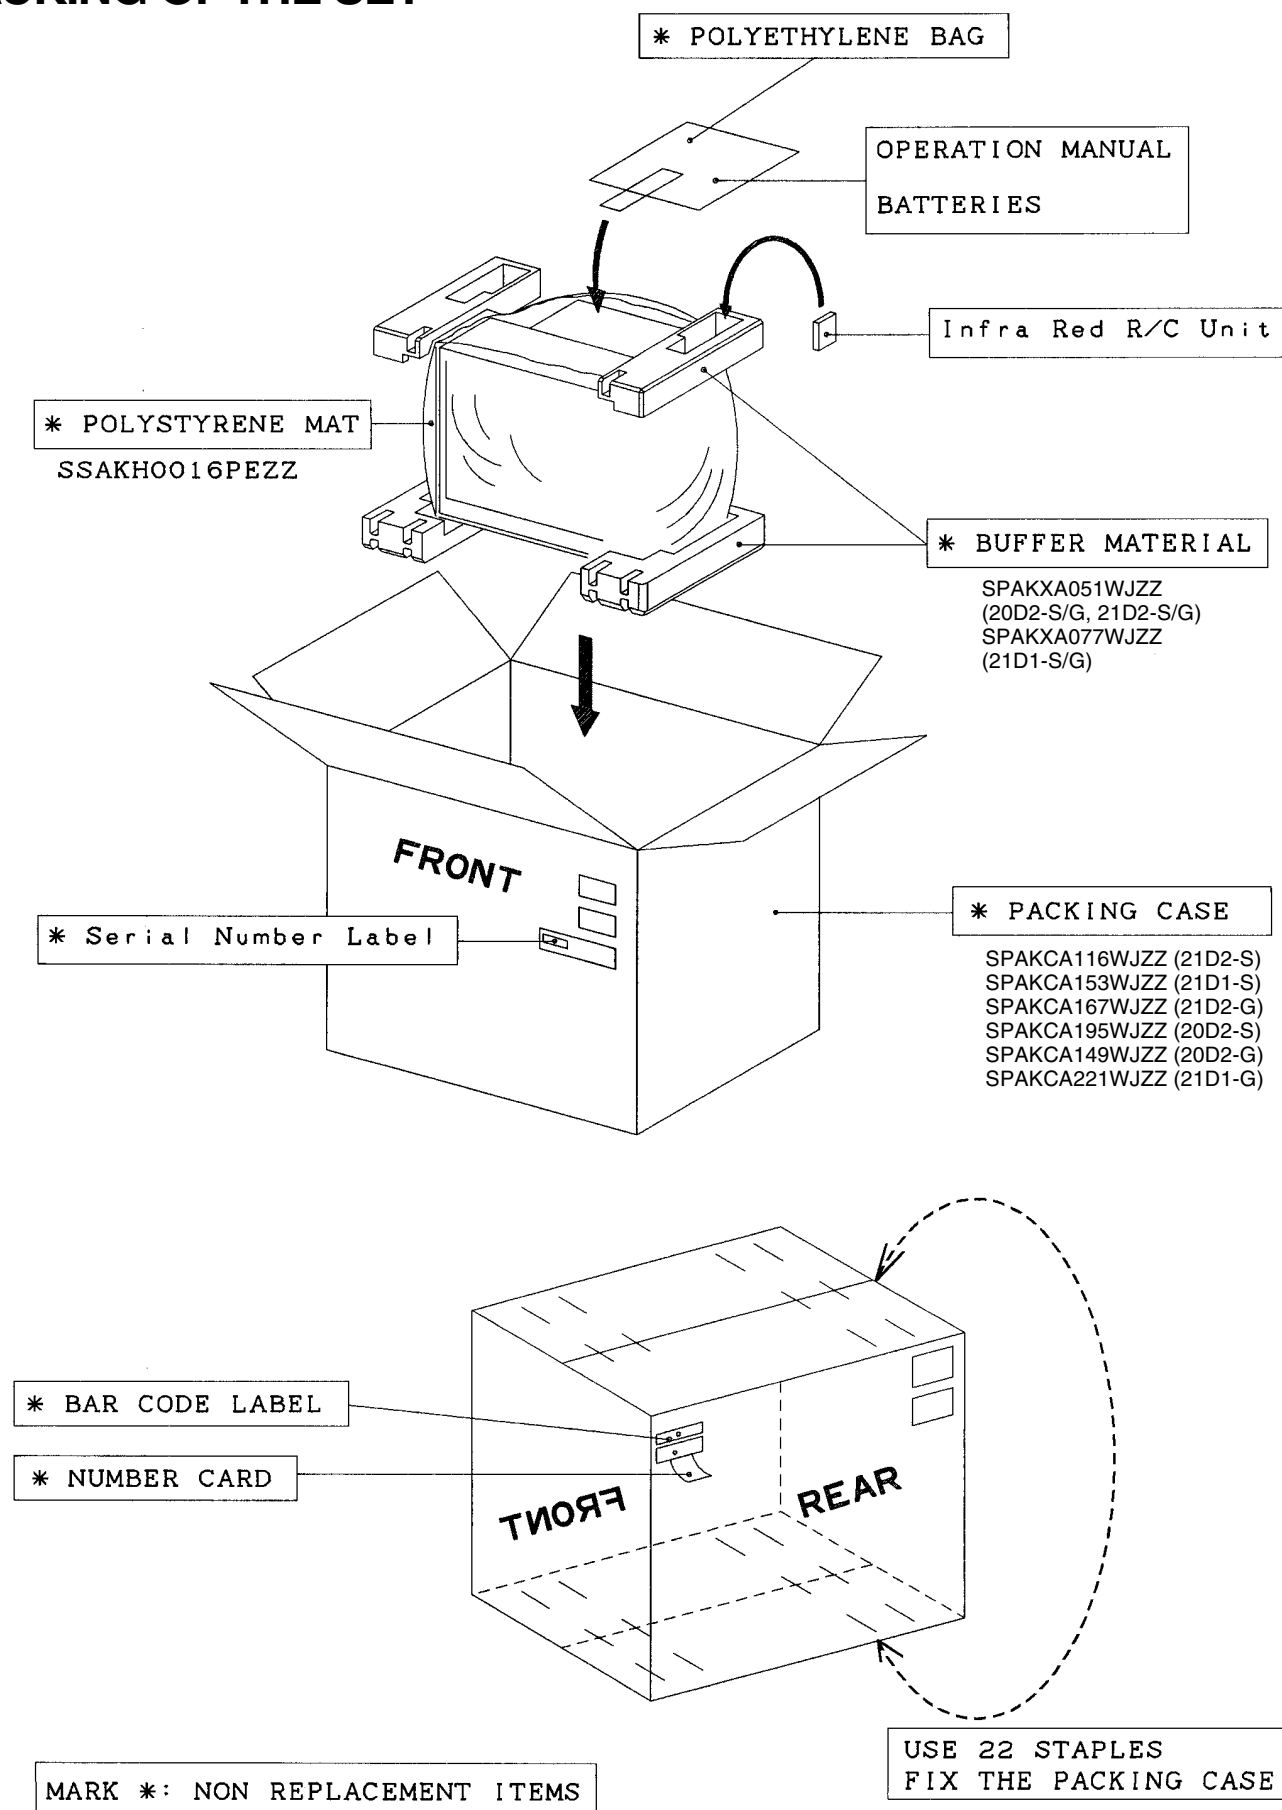

SHARP

COPYRIGHT © 2002 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages